

 
 
 




 

 
 




 
 


 









2TR-FE ENGINE MECHANICAL

SST

| | | | |
|---|---------------|--|--|
|  | 09032-00100 | Oil Pan Seal Cutter | |
|  | 09201-01055 | Valve Guide Bushing Remover & Replacer 5.5 | |
|  | 09201-41020 | Valve Stem Oil Seal Replacer | |
|  | 09202-70020 | Valve Spring Compressor | |
|  | (09202-00010) | Attachment | |
|  | 09213-54015 | Crankshaft Pulley Holding Tool | |
|  | (91651-60855) | Bolt | |
|  | 09222-30010 | Connecting Rod Bushing Remover & Replacer | |
|  | 09223-15030 | Oil Seal & Bearing Replacer | |
|  | 09223-50010 | Crankshaft Front Oil Seal Replacer | |
|  | 09228-07501 | Oil Filter Wrench | |

| | | | |
|---|---------------|-------------------------------|--|
|  | 09276-75010 | Valve Lifter Tool | |
|  | 09301-00210 | Clutch Guide Tool | |
|  | 09330-00021 | Companion Flange Holding Tool | |
|  | 09843-18030 | Tacho-pulse Pickup Wire No.2 | |
|  | 09843-18040 | Diagnosis Check Wire No.2 | |
|  | 09950-50013 | Puller C Set | |
|  | (09951-05010) | Hanger 150 | |
|  | (09952-05010) | Slide Arm | |
|  | (09953-05010) | Center Bolt 100 | |
|  | (09954-05021) | Claw No.2 | |
|  | 09950-60010 | Replacer Set | |
|  | (09951-00250) | Replacer 25 | |

PP

| | | | |
|--|---------------|-------------|--|
|  | (09951-00300) | Replacer 30 | |
|  | (09951-00350) | Replacer 35 | |
|  | (09951-00400) | Replacer 40 | |
|  | 09950-70010 | Handle Set | |
|  | (09951-07100) | Handle 100 | |
|  | (09951-07150) | Handle 150 | |