


 
 
 
 
 
 
 

 
 



 


 
 
 











 



POWER STEERING


SST

	09023-12701	Union Nut Wrench 17mm	
	09023-38401	Union Nut Wrench 14mm	
	09521-24010	Rear Axle Shaft Puller	
	09527-21011	Rear Axle Shaft Bearing Remover	
	09610-20012	Pitman Arm Puller	
	09612-00012	Rack & Pinion Steering Rack Housing Stand	
	09612-24014	Steering Gear Housing Overhaul Tool Set	
	(09613-22011)	Steering Rack Shaft Bushing Puller	
	09616-00011	Steering Worm Bearing Adjusting Socket	
	09628-62011	Boll Joint Puller	
	09630-00014	Power Steering Gear Housing Overhaul Tool Set	

PP

	(09631-00132)	Vane Pump Bracket	
	09631-10021	Rack Stopper Wrench	
	09631-20081	Seal Ring Tool	
	09631-20111	Steering Rack Cover G	
	09631-33010	Steering Rack Cover I	
	09640-10010	Power Steering Pressure Gauge Set	
	(09641-01010)	Gauge Assy	
	(09641-01030)	Attachment B	
	(09641-01060)	Attachment E	
	09922-10010	Variable Open Wrench	
	09950-60010	Replacer Set	
	(09951-00180)	Replacer 18	

	(09951-00250)	Replacer 25	
	(09951-00280)	Replacer 28	
	(09951-00290)	Replacer 29	
	(09951-00320)	Replacer 32	
	(09951-00340)	Replacer 34	
	(09951-00400)	Replacer 40	
	(09951-00440)	Replacer 44	
	(09951-00480)	Replacer 48	
	(09952-06010)	Adapter	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	

	(09951-07360)	Handle 360	
---	---------------	------------	--