

---

# BODY

## GENERAL MAINTENANCE

### 1. TIGHTEN BOLTS AND NUTS ON CHASSIS AND BODY

- (a) Tighten the bolts and nuts on the chassis parts listed below, if necessary.
  - Front axle and suspension
  - Drive train
  - Rear axle and suspension
  - Brake system
  - Engine mounting
  - Other chassis parts
- (b) Tighten the bolts and nuts on the body parts listed below, if necessary.
  - Seat belt system
  - Seats
  - Doors and hood
  - Body mountings
  - Fuel tank
  - Exhaust pipe system
  - Other body parts

### 2. REPLACE CLEAN AIR FILTER SUB-ASSEMBLY

- (a) Remove the glove compartment assembly.
- (b) Remove the filter case from the filter outlet.
- (c) Remove the filter from the filter case.
- (d) Replace the filter with a new one.
- (e) The installation procedures are the removal procedures in reverse order.