

DTC	P0125	Insufficient Coolant Temperature for Closed Loop Fuel Control
------------	--------------	--

DESCRIPTION

Refer to DTC P0115 (See page [ES-104](#)).

DTC No.	DTC Detection Conditions	Trouble Areas
P0125	Engine coolant temperature (ECT) does not reach closed-loop enabling temperature for 20 minutes (this period varies with engine start ECT) (2 trip detection logic)	<ul style="list-style-type: none"> • Cooling system • Engine coolant temperature sensor • Thermostat

MONITOR DESCRIPTION**ES**

The resistance of the ECT sensor varies in proportion to the actual ECT. The ECM supplies a constant voltage to the sensor and monitors the signal output voltage of the sensor. The signal voltage output varies according to the changing resistance of the sensor. After the engine is started, the ECT is monitored through this signal. If the ECT sensor indicates that the engine is not yet warm enough for closed-loop fuel control, despite a specified period of time having elapsed since the engine was started, the ECM interprets this as a malfunction in the sensor or cooling system and sets the DTC.

Example:

The ECT is 0°C (32°F) at engine start. After 5 minutes running time, the ECT sensor still indicates that the engine is not warm enough to begin closed-loop fuel (air-fuel ratio feedback) control. The ECM interprets this as a malfunction in the sensor or cooling system and sets the DTC.

MONITOR STRATEGY

Related DTCs	P0125: Insufficient engine coolant temperature for closed-loop fuel control
Required Sensors/Components (Main)	Thermostat, cooling system
Required Sensors/Components (Related)	Engine coolant temperature sensor and mass air flow meter
Frequency of Operation	Continuous
Duration	56 seconds: Closed-loop enable temperature - 8.34°C (15°F) or more 98 seconds: Closed-loop enable temperature - 19.45 to - 8.34°C (35 to 15°F) 1200 seconds: Less than closed-loop enable temperature - 19.45°C (35°F)
MIL Operation	2 driving cycles
Sequence of Operation	P0100 - P0103 (MAF sensor) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor)

TYPICAL ENABLING CONDITIONS**All**

Monitor runs whenever following DTCs not present	P0100 - P0103 (MAF meter) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor)
--	---

Case 1

Engine coolant temperature or intake air temperature at engine start	"Closed-loop enabling temperature - 8.34°C (15°F)" or more
Engine	Running
Fuel cut	OFF

Case 2

Engine coolant temperature or intake air temperature at engine start	Between "Closed-loop enabling temperature - 19.45°C (35°F)" and "Closed-loop enabling temperature - 8.34°C (15°F)"
Engine	Running
Fuel cut	OFF

Case 3

Engine coolant temperature or intake air temperature at engine start	Lower than "Closed-loop enabling temperature - 19.45°C (35°F)"
Engine	Running
Fuel cut	OFF
Idle	OFF

TYPICAL MALFUNCTION THRESHOLDS

Engine coolant temperature	Lower than closed-loop enabling temperature
----------------------------	---

WIRING DIAGRAM

Refer to DTC P0115 (See page [ES-105](#)).

ES**HINT:**

- If any of DTCs P0115, P0116, P0117 or P0118 are set simultaneously with DTC P0125, the Engine Coolant Temperature (ECT) sensor may have an open or a short circuit. Troubleshoot those DTCs first.
- Read freeze frame data using an intelligent tester. Freeze frame data record the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data, from the time the malfunction occurred.

1 CHECK ANY OTHER DTCS OUTPUT (IN ADDITION TO DTC P0125)

- Connect an intelligent tester to the DLC3.
- Turn the ignition switch ON.
- Turn the tester ON.
- Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- Read DTCs.

Result

Display (DTC Output)	Proceed to
P0125	A
P0125 and other DTCs	B

HINT:

If any DTCs other than P0125 are output, troubleshoot those DTCs first.

B**GO TO DTC CHART****A****2 INSPECT W/THERMOSTAT WATER INLET SUB-ASSEMBLY (THERMOSTAT)**

- Remove the w/ thermostat water inlet sub-assembly (See page [CO-9](#)).
- Check the valve opening temperature of the thermostat.

Standard:

80° to 84°C (176° to 183°F)

HINT:

In addition to the above check, confirm that the valve is completely closed when the temperature is below the standard.

- (c) Reinstall the w/ thermostat water inlet sub-assembly (See page [CO-9](#)).

NG**REPLACE W/THERMOSTAT WATER INLET
SUB-ASSEMBLY**

OK

ES**3****CHECK COOLING SYSTEM**

- (a) Check for defects in the cooling system that might cause the system to be too cold, such as abnormal radiator fan operation or any modifications.

NG**REPAIR OR REPLACE COOLING SYSTEM**

OK

REPLACE ENGINE COOLANT TEMPERATURE SENSOR