

INSTALLATION

1. **INSTALL CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY**
 - (a) Install the 2 camshaft timing oil control valves with the 2 bolts.
Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)
 - (b) Connect the 2 connectors.
2. **INSTALL INTAKE AIR SURGE TANK (See page [FU-17](#))**
3. **INSTALL AIR CLEANER ASSEMBLY (See page [ES-416](#))**
4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
5. **ADD ENGINE COOLANT (See page [CO-3](#))**
6. **CHECK FOR ENGINE COOLANT LEAKAGE (See page [CO-4](#))**
7. **INSTALL V-BANK COVER (See page [ES-416](#))**