



EFI RELAY

INSPECTION

1. INSPECT EFIRELAY

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the EFI relay.