

# FUEL PUMP RELAY

## INSPECTION

### 1. INSPECT FUEL PUMP RELAY ASSEMBLY

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

#### Standard

Tester Connection	Specified Condition
3 - 4	Below 1 $\Omega$
3 - 5	10 k $\Omega$ or higher
3 - 4	10 k $\Omega$ or higher (Apply battery voltage to terminals 1 and 2)
3 - 5	Below 1 $\Omega$ (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the fuel pump relay.

