


Back-Up Light

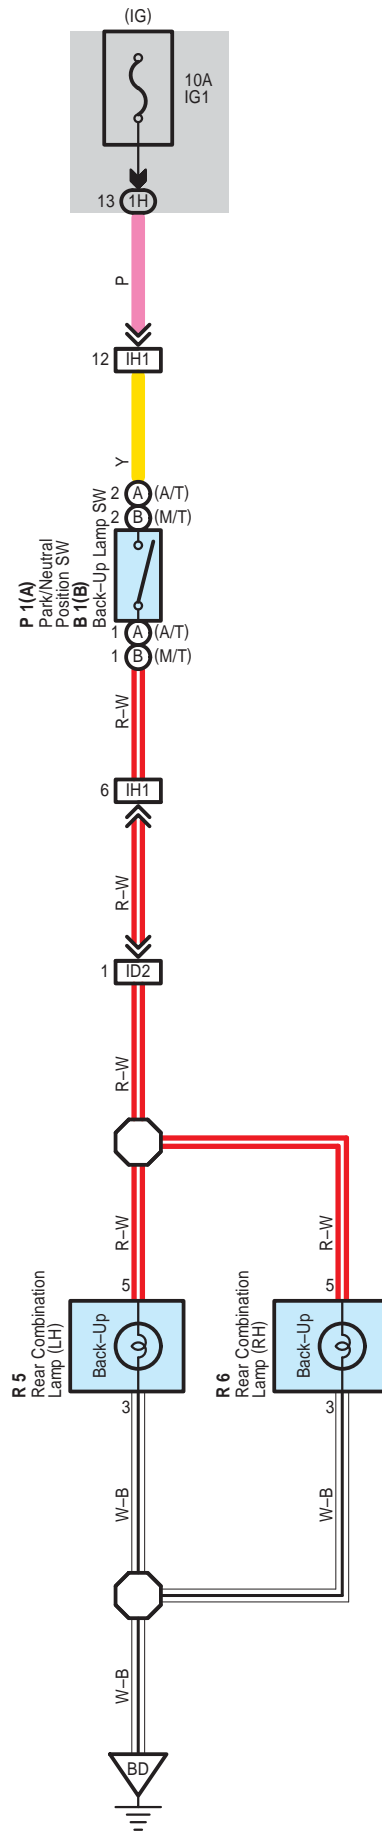

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
B1	B	R5	40 (1GR-FE)	R6	47 (*1)
			42 (2TR-FE)		
P1	A				49 (*3)
		R6	43 (2TR-FE)		47 (*1)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	54	Frame Wire and Instrument Panel Wire (Left Kick Panel)
IH1	55	Engine Wire and Instrument Panel Wire (Right Side of Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
BD	56 (*1)	Near the Rear Differential
	57 (*2)	
	58 (*3)	

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat