



Turn Signal and Hazard Warning Light

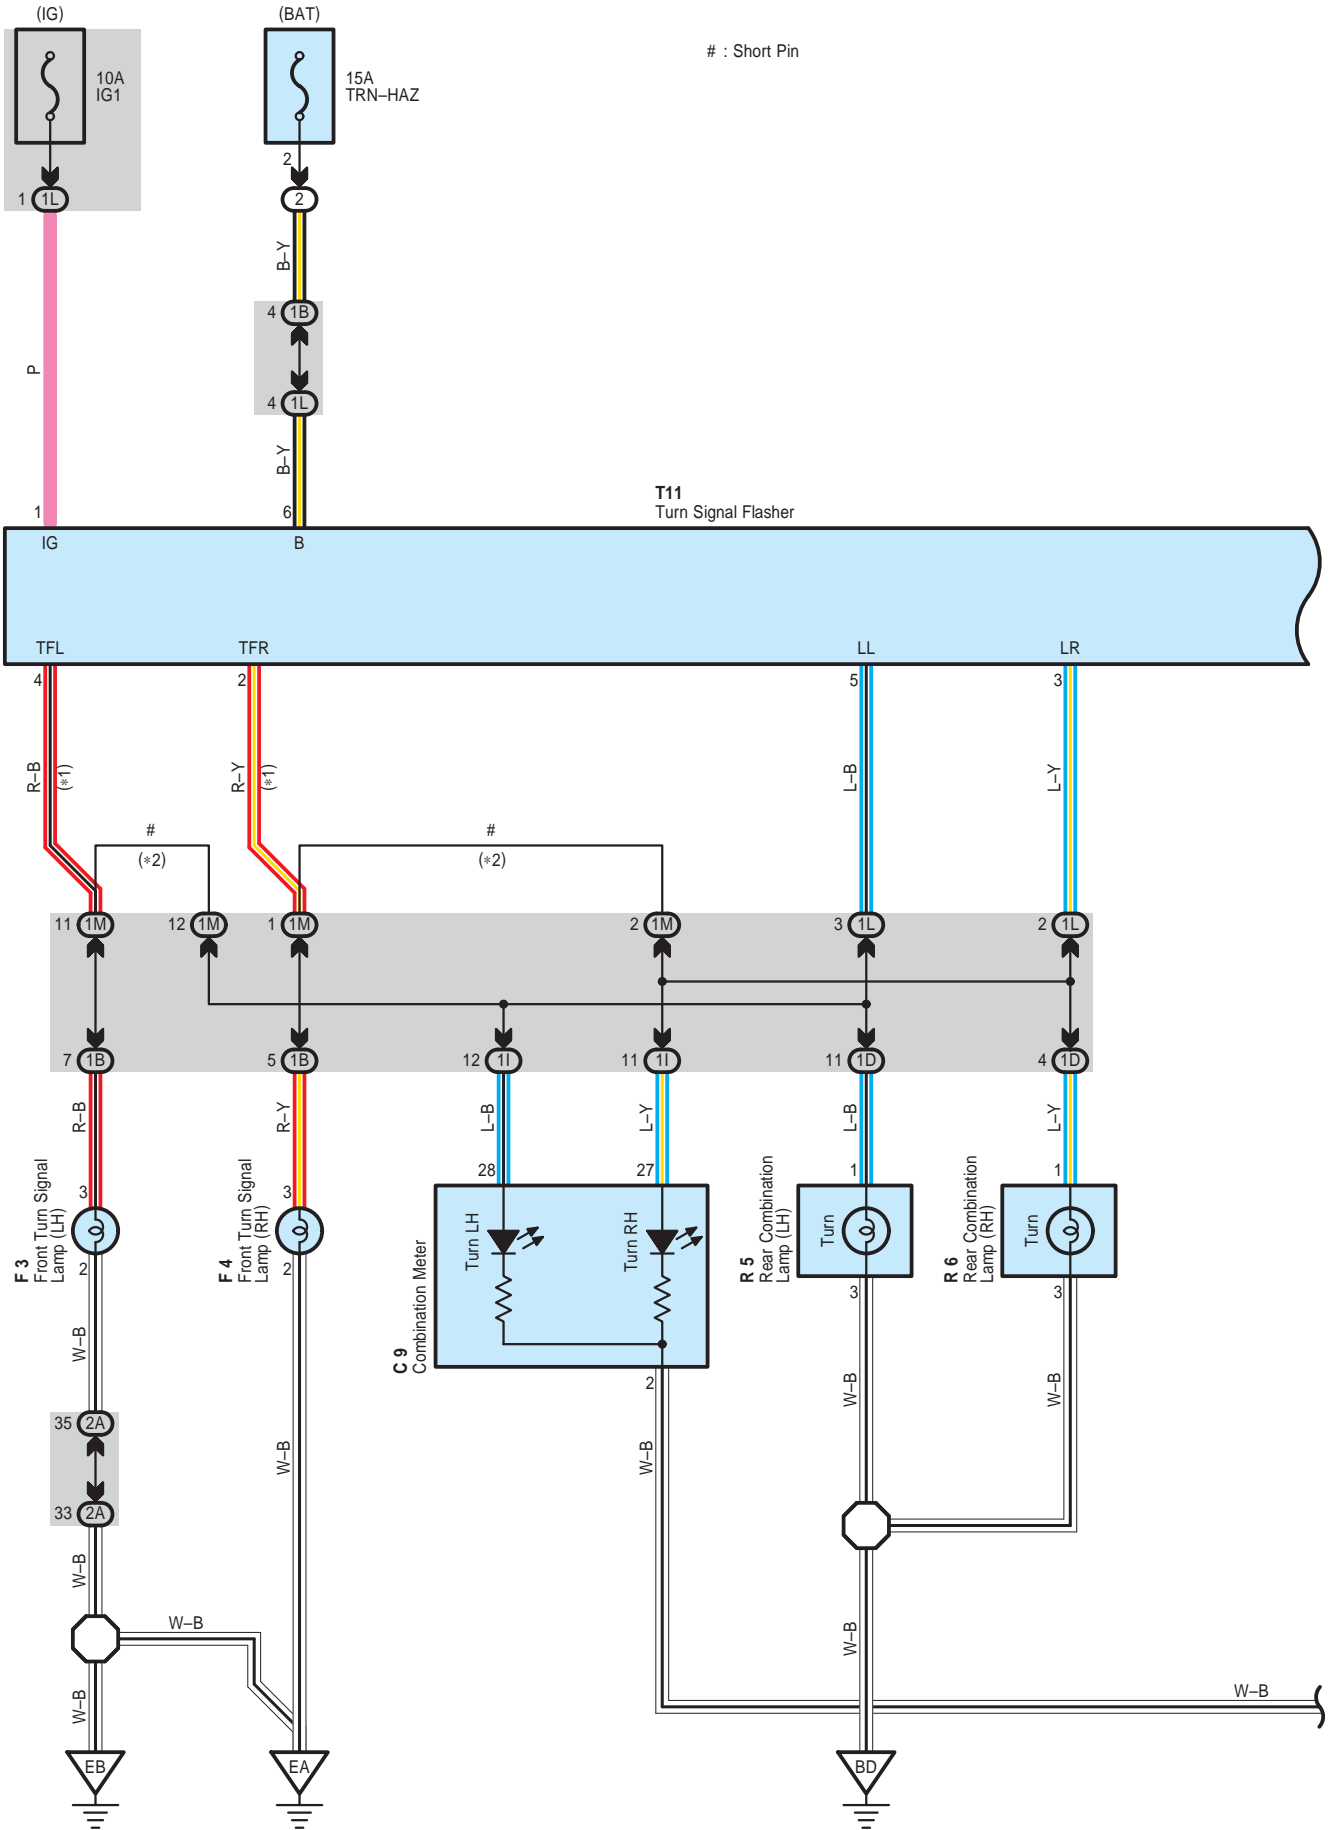

* 1 : w/ Daytime Running Light
 * 2 : w/o Daytime Running Light

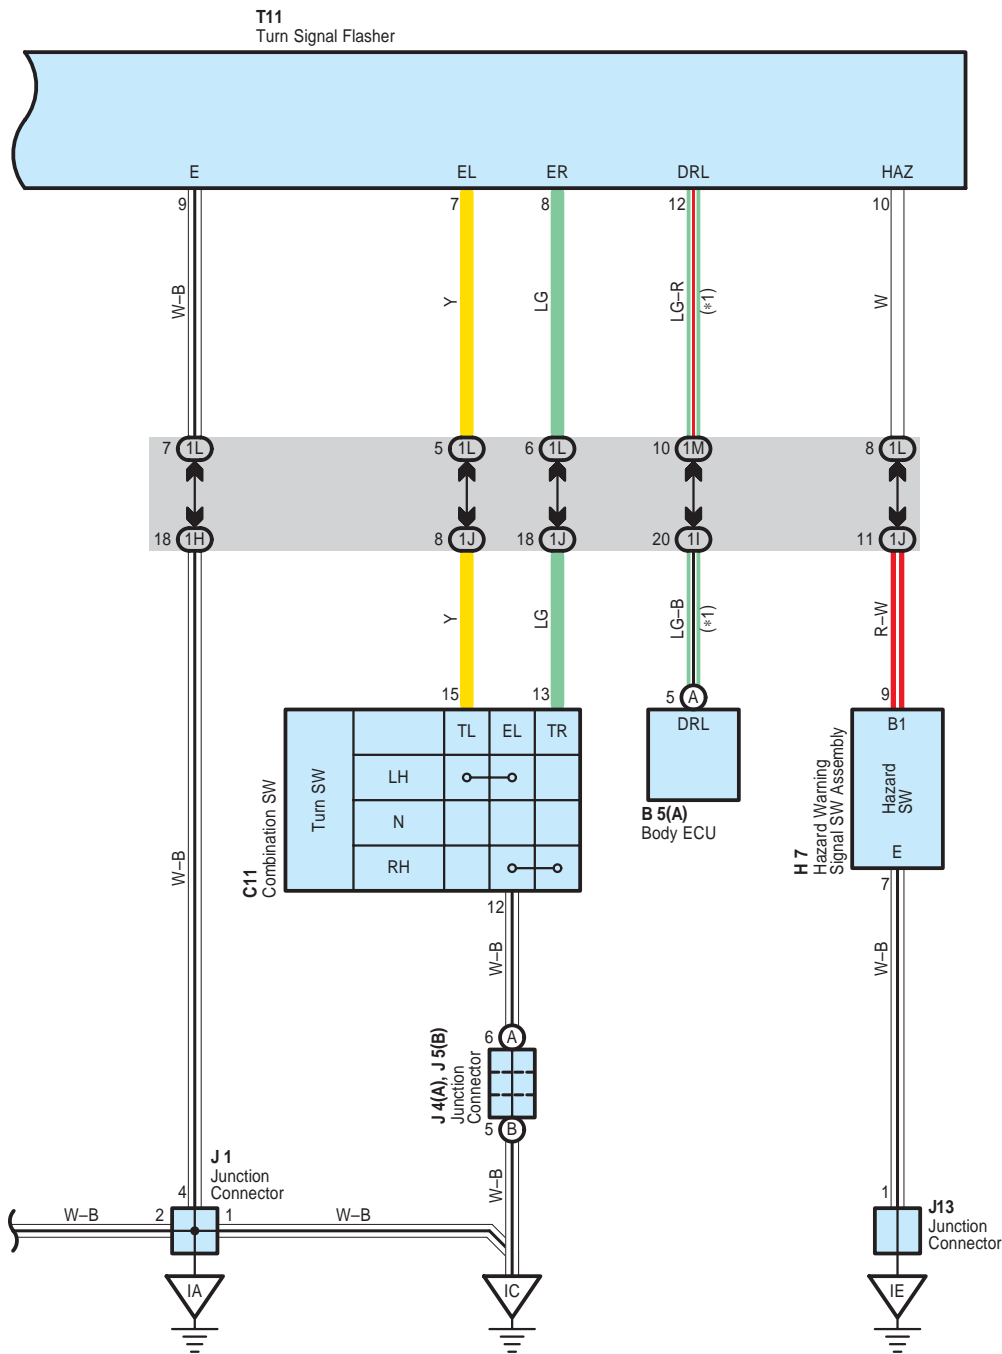

Turn Signal and Hazard Warning Light

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5 A	44	H7	45	R5	49 (*3)
C9	44	J1	45	R6	47 (*1)
C11	44	J4 A	45		48 (*2)
F3	40 (1GR-FE)	J5 B	45		49 (*3)
	42 (2TR-FE)	J13	45	T11	45
F4	40 (1GR-FE)	R5	47 (*1)		
	42 (2TR-FE)		48 (*2)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Frame Wire and Driver Side J/B (Lower Finish Panel)
1H	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1I		
1J		
1L	29	Relay Wire and Driver Side J/B (Lower Finish Panel)
1M		
2A	24	Engine Room J/B (Engine Compartment Left)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (1GR-FE)	Front Right Fender
	53 (2TR-FE)	
EB	52 (1GR-FE)	Front Left Fender
	53 (2TR-FE)	
IA	54	Left Kick Panel
IC	54	Instrument Panel Brace RH
IE	54	Right Kick Panel
BD	56 (*1)	Near the Rear Differential
	57 (*2)	
	58 (*3)	

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat

