



: Parts Location

Code	See Page	Code	See Page	Code	See Page		
B5	44	G1	A	40 (1GR-FE)	G2	D	40 (1GR-FE)
C9	44		B	40 (1GR-FE)			42 (2TR-FE)
E4	44		C	42 (2TR-FE)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1J	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2E	24 (1GR-FE)	Engine No.2 Wire and Engine Room J/B (Engine Compartment Left)
	24 (2TR-FE)	Engine Wire and Engine Room J/B (Engine Compartment Left)
DB	34	Instrument Panel Wire and Instrument Panel J/B No.1 (Left Kick Panel)
DC	34	Engine Room Main Wire and Instrument Panel J/B No.1 (Left Kick Panel)
DD		
PA	36	Engine Wire and Instrument Panel J/B No.2 (Right Side of Glove Box)
PF	36	Instrument Panel Wire and Instrument Panel J/B No.2 (Right Side of Glove Box)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	53 (2TR-FE)	Engine Wire and Engine Room Main Wire (Inside of Engine Room R/B)
EB1	52 (1GR-FE)	Engine No.2 Wire and Engine Room Main Wire (Inside of Engine Room R/B)
IH1	55	Engine Wire and Instrument Panel Wire (Right Side of Glove Box)