



○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|-------------|------|-------------|------|----------|
| H5 | 41 (1GR-FE) | H6 | 41 (1GR-FE) | S8 | 45 |
| | 43 (2TR-FE) | | 43 (2TR-FE) | | |

○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|---|
| 2 | 24 | Engine Room R/B (Engine Compartment Left) |

○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|--|
| 1C | 28 | Engine Room Main Wire and Driver Side J/B (Lower Finish Panel) |
| 1I | 29 | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel) |