



Power Outlet for 115V

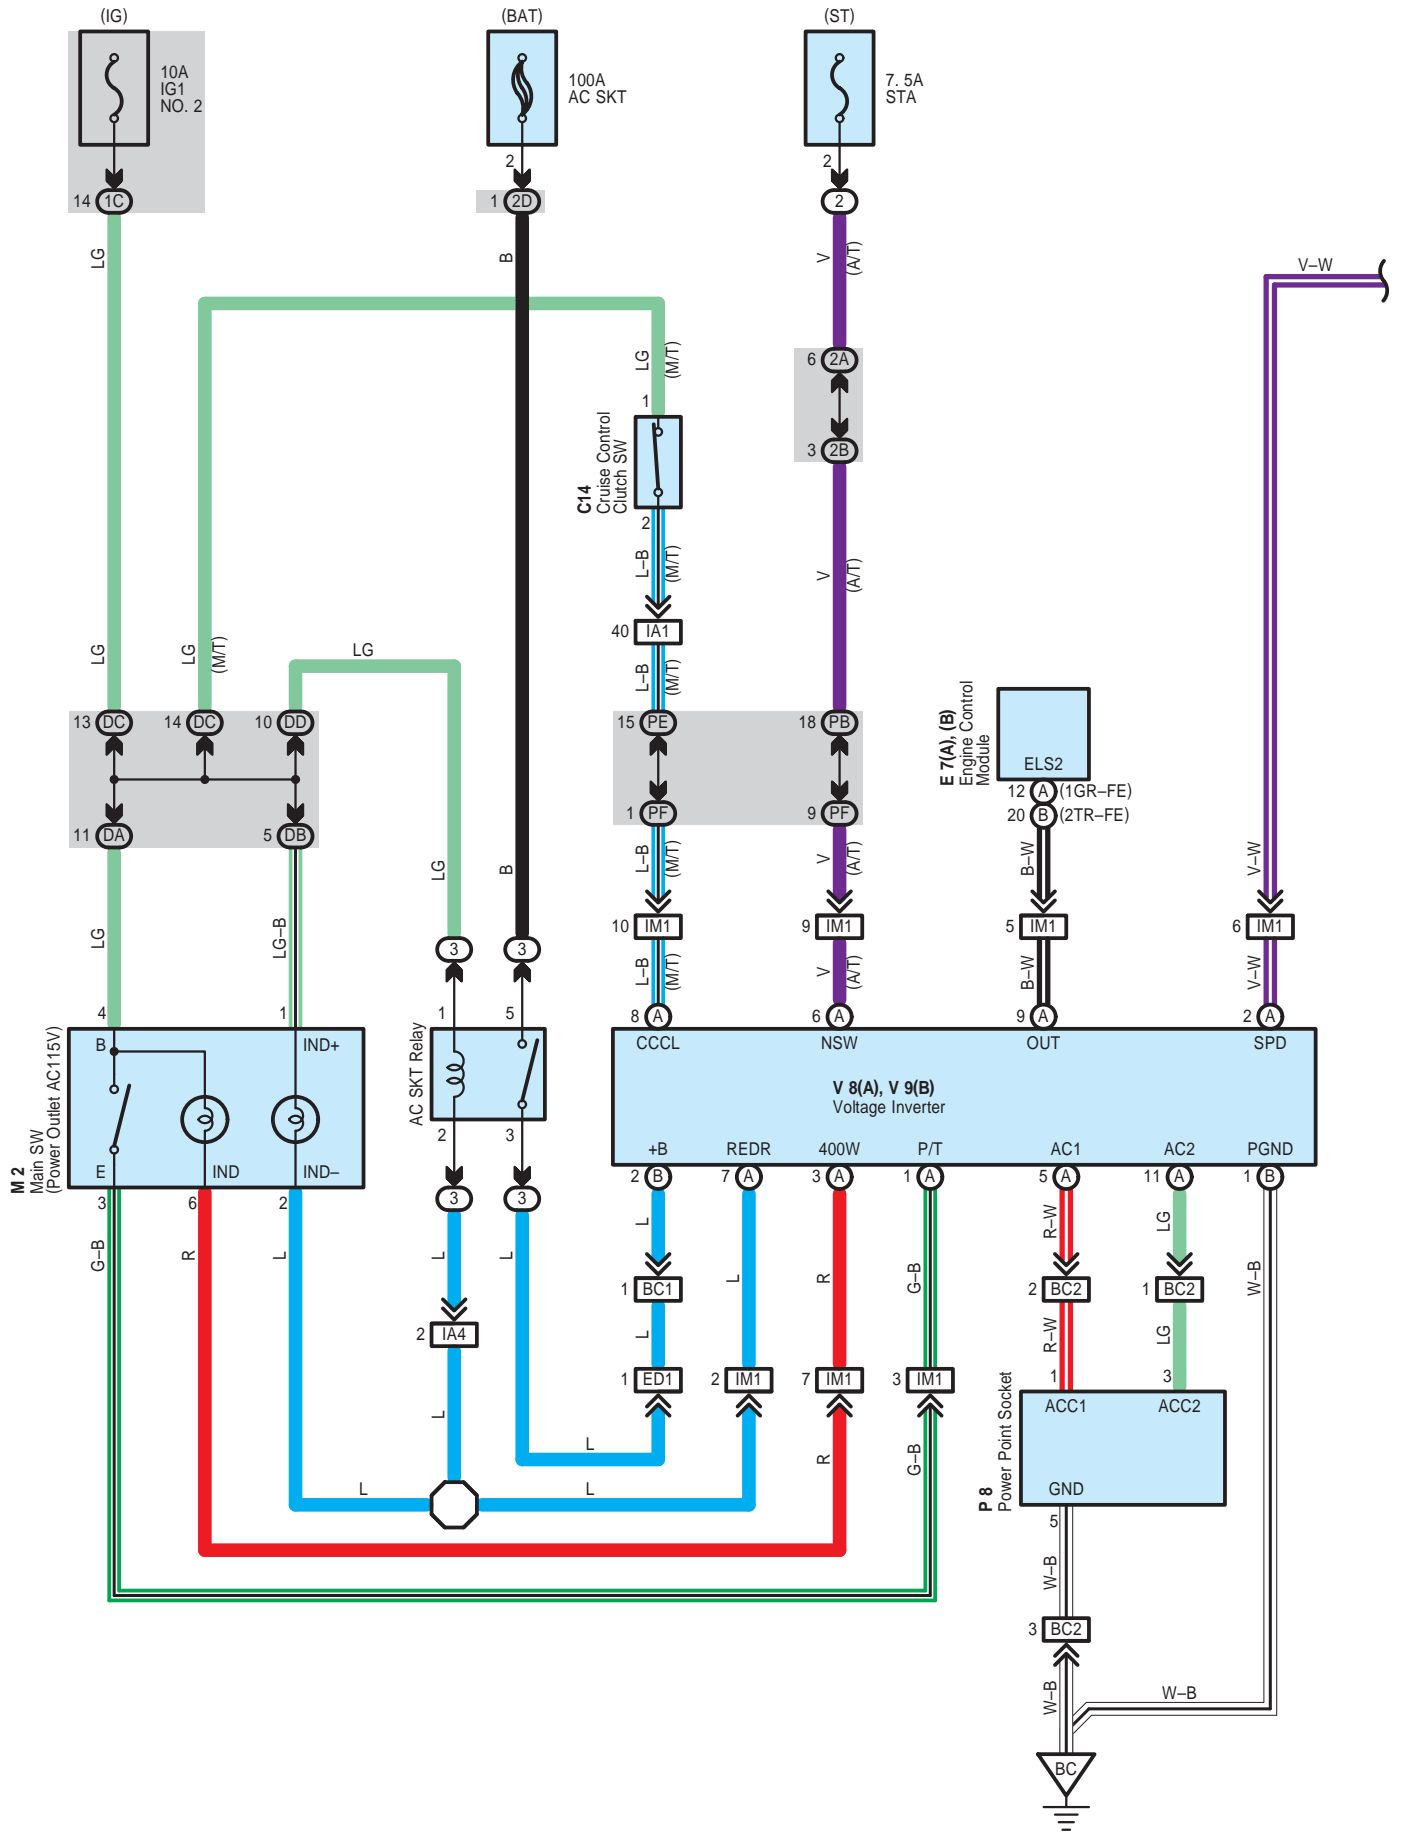

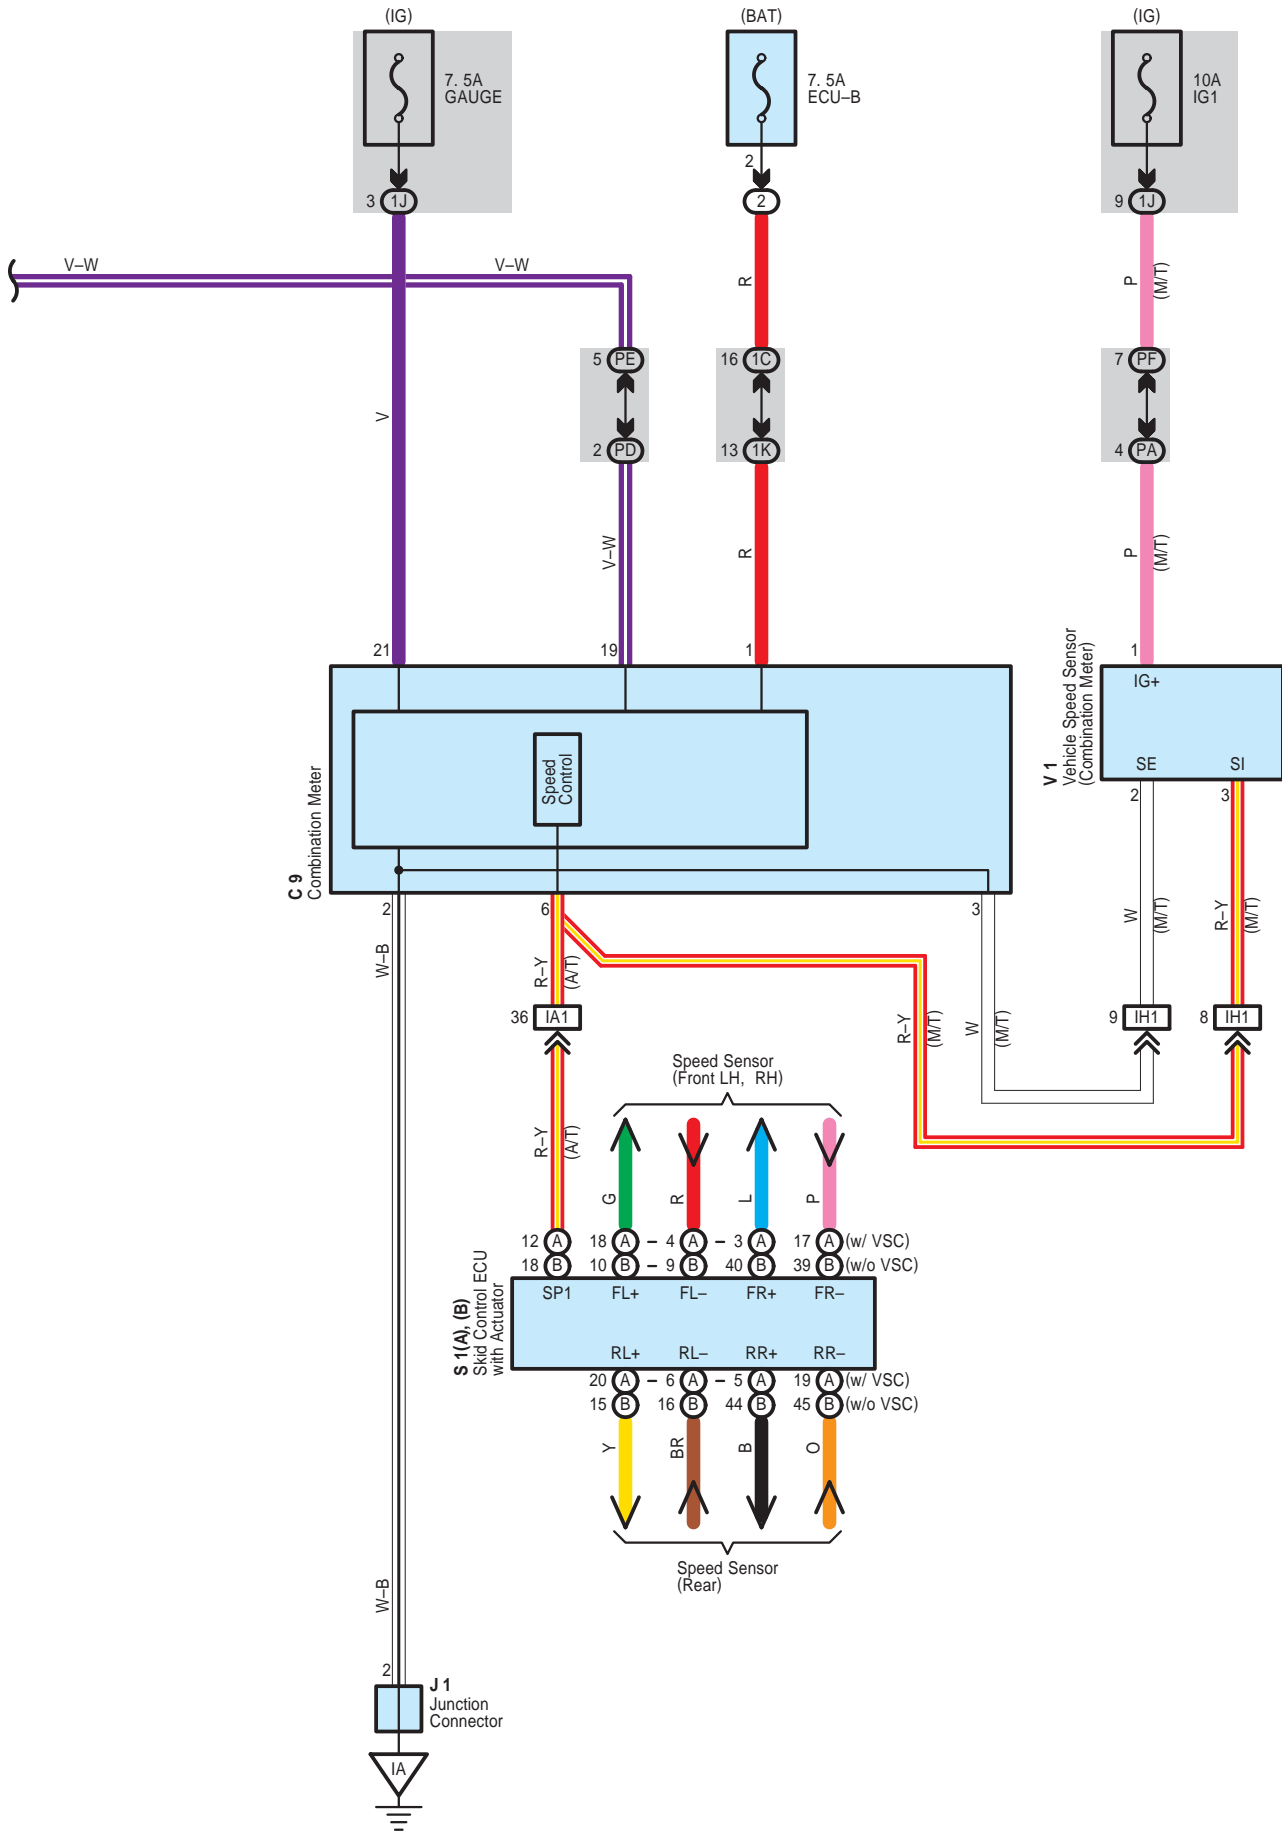

Power Outlet for 115V

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
C9	44	P8	47 (*1)	V8	A	47 (*1)
C14	44		48 (*2)			48 (*2)
E7	A	S1	A	V9	B	47 (*1)
	B		B			48 (*2)
J1	45	V1	41 (1GR-FE)			
M2	45		43 (2TR-FE)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.2 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1J	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
2A	24	Engine Room J/B (Engine Compartment Left)
2B	24	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
DA	34	Instrument Panel Wire and Instrument Panel J/B No.1 (Left Kick Panel)
DB		
DC	34	Engine Room Main Wire and Instrument Panel J/B No.1 (Left Kick Panel)
DD		
PA	36	Engine Wire and Instrument Panel J/B No.2 (Right Side of Glove Box)
PB		
PD	36	Instrument Panel Wire and Instrument Panel J/B No.2 (Right Side of Glove Box)
PE		
PF		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	52 (1GR-FE)	Frame No.2 Wire and Engine Room Main Wire (Front Fender Apron RH)
	53 (2TR-FE)	
IA1	54	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IA4		
IH1	55	Engine Wire and Instrument Panel Wire (Right Side of Glove Box)
IM1	55	Floor No.3 Wire and Instrument Panel Wire (Under the Console Box)
BC1	56 (*1)	Frame No.2 Wire and Floor No.3 Wire (Floor Seat Cross Member RH)
	57 (*2)	
BC2	56 (*1)	
	57 (*2)	

▽ : Ground Points

Code	See Page	Ground Points Location
IA	54	Left Kick Panel
BC	56 (*1)	Near the Voltage Inverter
	57 (*2)	

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat

