


Front Fog Light

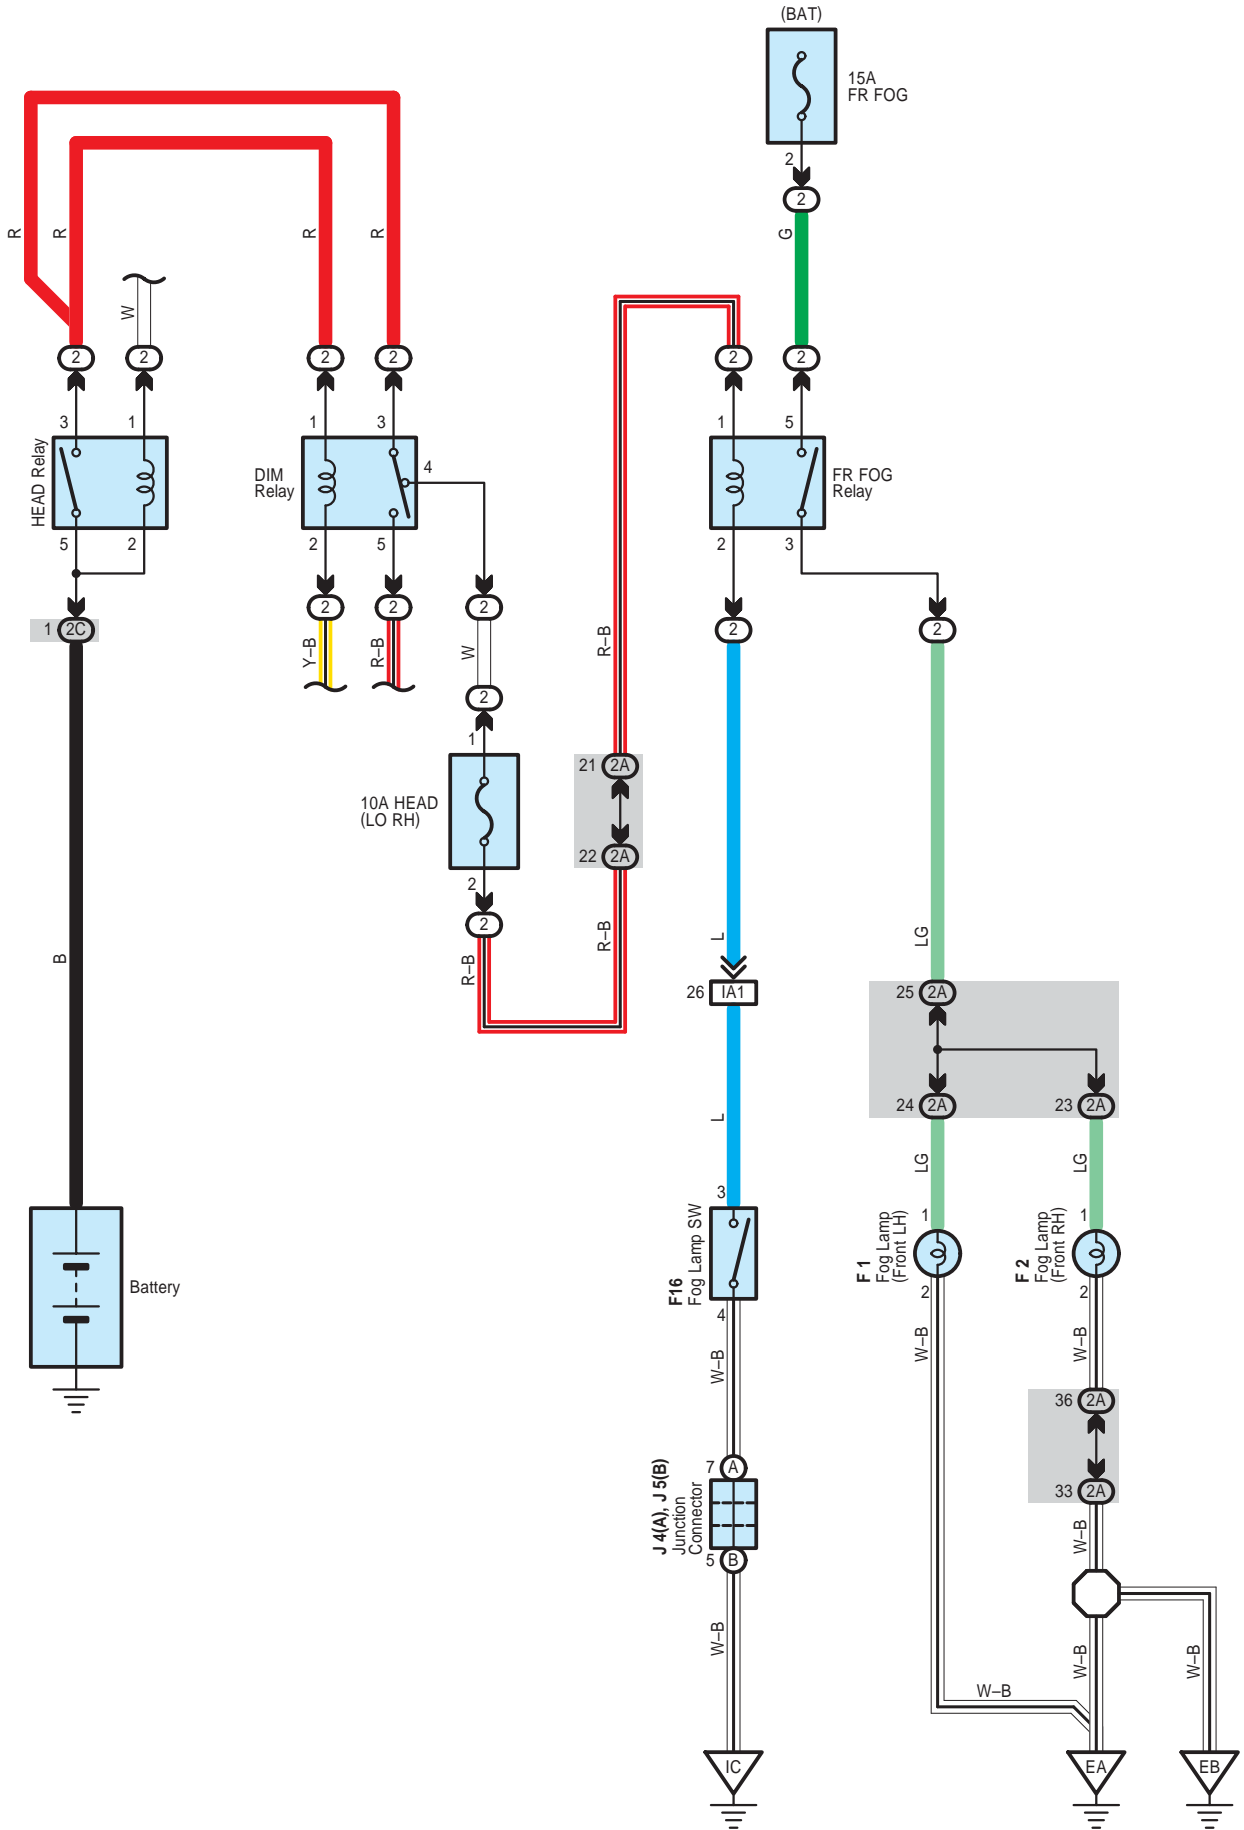

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
F1	40 (1GR-FE)	F16	44	J5	B 45
F2	40 (1GR-FE)	J4	A 45		

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	24	Engine Room J/B (Engine Compartment Left)
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
EA	52 (1GR-FE)	Front Right Fender
EB	52 (1GR-FE)	Front Left Fender
IC	54	Instrument Panel Brace RH