



Taillight

* 1 : w/ Trailer Towing
 * 2 : w/o Trailer Towing

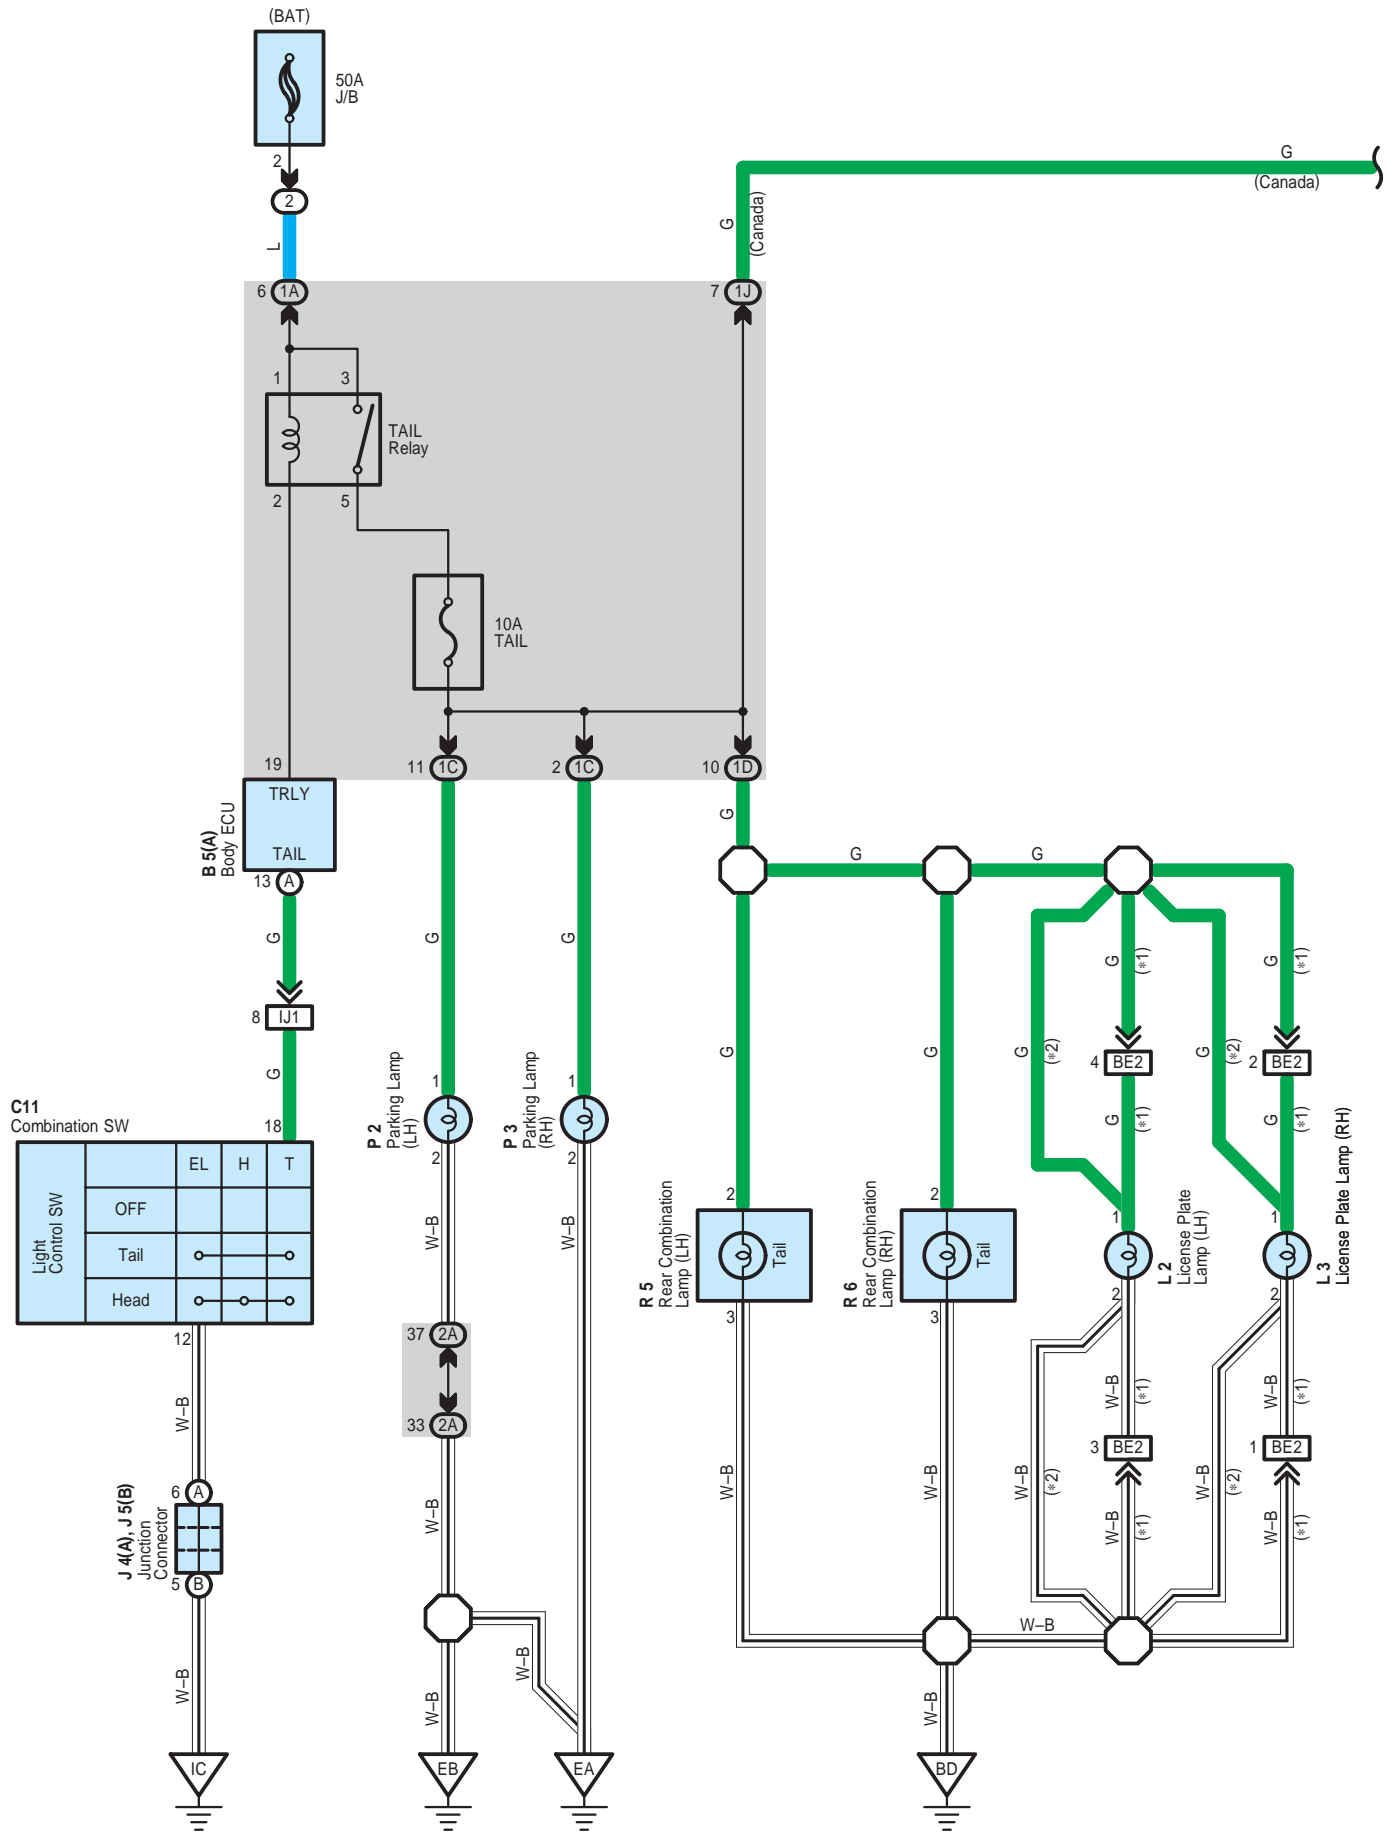

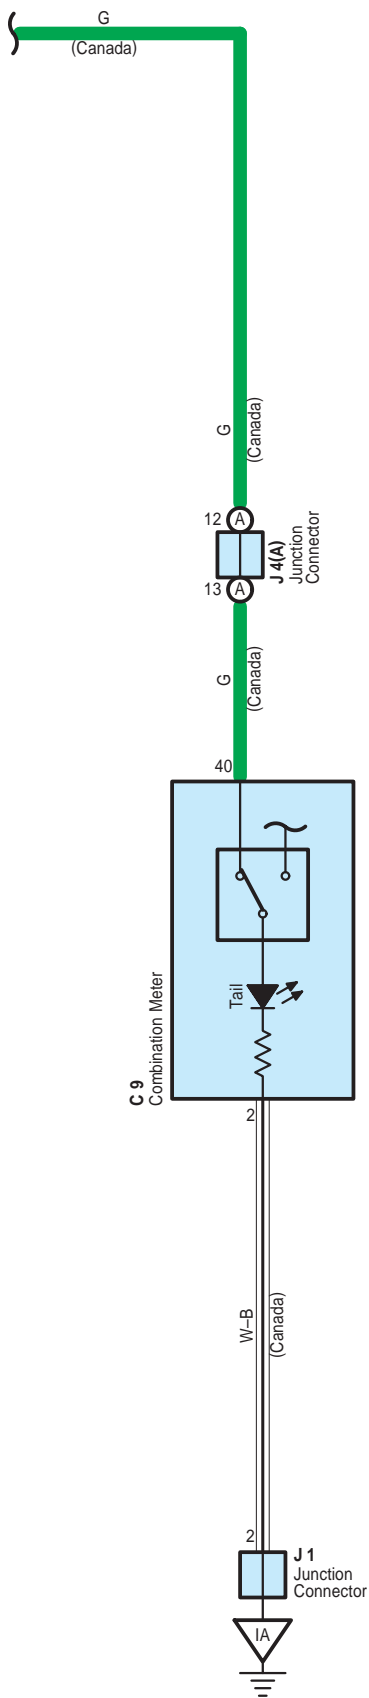

Taillight

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	A	44	L2	49 (*3)	R5
C9	44	L3	46 (*1)	47 (*1)	
C11	44		48 (*2)	48 (*2)	
J1	45	P2	49 (*3)	R6	49 (*3)
J4	A		41 (1GR-FE)		47 (*1)
J5	B		43 (2TR-FE)		48 (*2)
L2	46 (*1)	P3	41 (1GR-FE)		49 (*3)
	48 (*2)		43 (2TR-FE)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1D	28	Frame Wire and Driver Side J/B (Lower Finish Panel)
1J	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2A	24	Engine Room J/B (Engine Compartment Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	55	Instrument Panel Wire and Instrument Panel Wire (Right Kick Panel)
BE2	56 (*1)	Frame No.3 Wire and Frame Wire (Behind the Trailer Socket)
	57 (*2)	

▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (1GR-FE)	Front Right Fender
	53 (2TR-FE)	
EB	52 (1GR-FE)	Front Left Fender
	53 (2TR-FE)	
IA	54	Left Kick Panel
IC	54	Instrument Panel Brace RH
BD	56 (*1)	Near the Rear Differential
	57 (*2)	
	58 (*3)	

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat

