

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Compressor	90980-11349	C 9	Combination Meter	90980-12169
A 2	A/T Fluid Temp. Sensor	90980-11162	C10	Combination Meter	90980-12155
A 3	ADD Actuator Assembly	90980-11858	C11	Combination SW	90980-12259
A 4	Air Fuel Ratio Sensor (Bank 1 Sensor 1) (1GR-FE)	90980-10869	C12	Combination SW	90980-12359
	Air Fuel Ratio Sensor (Bank 1 Sensor 1) (2TR-FE)	90980-11178	C13	Combination SW	90980-12358
A 5	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	90980-10869	C14	Cruise Control Clutch SW	90980-10906
A 6	Air Injection Control Driver	90980-12068	C15	Center Stop Lamp	90980-11436
A 7	Air Injection Control Driver	90980-11858	C16	Curtain Shield Airbag Squib (LH)	90980-12219
A 8	Air Pressure Sensor	90980-10845	C17	Curtain Shield Airbag Squib (RH)	
A 9	Air Pump	90980-11032	D 1	Damper Servo Motor (Air Inlet)	90080-98307
A10	Air Switching Valve	90980-11149	D 2	Damper Servo Motor (Air Mix)	90980-11950
A11	Airbag Sensor (Front LH)	90980-11856	D 3	Damper Servo Motor (Air Vent Mode)	
A12	Airbag Sensor (Front RH)		D 4	Data Link Connector 3	90980-11665
A13	Ambient Temp. Sensor	90980-11070	D 5	Diff. Lock SW	90980-10933
A14	A/C Amplifier	90980-12200	D 6	Diode (Clutch Start)	90980-10962
A15	A/C Control Assembly	90980-11615	D 7	Door Control Receiver	90980-11909
A16	A/C Control Assembly	90980-10803	D 8	Downhill Assist Control SW	90980-11013
A17	A/C Thermistor No.1	90980-11918	D 9	Deceleration Sensor	90980-10845
A18	A/T Shift Lever Illumination	90980-12221	D10	Diff. Lock Shift Actuator Assembly	90980-11194
A19	Accelerator Position Sensor	90980-11858	D11	Door Courtesy SW (Driver's Side)	90980-10871
A20	Airbag Cut Off SW	90980-12063	D12	Door Courtesy SW (Front Passenger's Side)	
A21	Airbag Sensor Assembly Center	90980-12391	D13	Door Courtesy SW (Rear LH Lower Side)	90980-10825
A22	Airbag Sensor Assembly Center	90980-12449	D14	Door Courtesy SW (Rear LH Upper Side)	90980-11299
A23	Airbag Sensor Assembly Center	90980-12450	D15	Door Courtesy SW (Rear LH)	90980-10871
A24	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12219	D16	Door Courtesy SW (Rear RH Lower Side)	90980-10825
A25	Airbag Squib (Front Passenger's Airbag Assembly)	90980-12224	D17	Door Courtesy SW (Rear RH Upper Side)	90980-11299
A26	Airbag Squib (Steering Wheel Pad)	90980-12160	D18	Door Courtesy SW (Rear RH)	90980-10871
A27	Auto LSD SW	90980-11013	D19	Door Lock Assembly (Driver's Side)	90980-12226
A28	Accessory Meter	90980-11923	D20	Door Lock Assembly (Front Passenger's Side)	
B 1	Back-Up Lamp SW	90980-10576	D21	Door Lock Assembly (Rear LH)	
B 2	Brake Fluid Level Warning SW (w/ VSC)	90980-11156	D22	Door Lock Assembly (Rear RH)	
	Brake Fluid Level Warning SW (w/o VSC)	90980-11207	D23	Door Lock Control SW	90980-10797
B 3	Blower Motor	90980-10916	E 1	Electronically Controlled Transmission Solenoid (1GR-FE)	90980-12293
B 4	Blower Resistor	90080-98149		Electronically Controlled Transmission Solenoid (2TR-FE)	90980-10891
B 5	Body ECU	90980-12203	E 2	Engine Coolant Temp. Sensor	90980-10735
C 1	Camshaft Position Sensor	90980-10947	E 3	Engine Oil Pressure SW	90980-11363
C 2	Camshaft Timing Oil Control Valve	90980-11162	E 4	Engine Control Module	90980-12144
C 3	Camshaft Timing Oil Control Valve (LH)		E 5	Engine Control Module	90980-12145
C 4	Camshaft Timing Oil Control Valve (RH)		E 6	Engine Control Module	90980-12143
C 5	Crankshaft Position Sensor (1GR-FE)	90980-12028	E 7	Engine Control Module	90980-12146
	Crankshaft Position Sensor (2TR-FE)	90980-11016	E 8	Engine Control Module	90980-12142
C 6	Cigarette Lighter	90980-10760	F 1	Fog Lamp (Front LH)	90080-98039
C 7	Clutch Start Cancel SW	90980-12113	F 2	Fog Lamp (Front RH)	
C 8	Clutch Start SW	90980-10825			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
F 3	Front Turn Signal Lamp (LH)	90980-11020	J 4	Junction Connector	90980-11915
F 4	Front Turn Signal Lamp (RH)		J 5	Junction Connector	
F 5	Fuel Injector (No.1)	90980-11875	J 6	Junction Connector	90980-12355
F 6	Fuel Injector (No.2)		J 7	Junction Connector	
F 7	Fuel Injector (No.3)		J 8	Junction Connector	
F 8	Fuel Injector (No.4)		J 9	Junction Connector	
F 9	Fuel Injector (No.5)		J10	Junction Connector	
F10	Fuel Injector (No.6)		J11	Junction Connector	90980-10871
F11	Fuel Pump Resistor	90980-11156	J12	Junction Connector	90980-11542
F12	4WD Control ECU	90980-12149	J13	Junction Connector	90980-10976
F13	4WD Control ECU	90980-12150	J14	Junction Connector	90980-11542
F14	4WD Control ECU	90980-10801	K 1	Knock Control Sensor (Bank 1)	90980-11875
F15	4WD Control SW	90980-11909	K 2	Knock Control Sensor (Bank 2)	
F16	Fog Lamp SW	90980-11090	K 3	Key Interlock Solenoid	90980-12063
F17	Front Seat Outer Belt (LH)	90980-12253	L 1	Canister Pump Module	90980-12380
F18	Front Seat Outer Belt (RH)		L 2	License Plate Lamp (LH)	90980-11162
F19	Fuel Suction Pump and Gage Assembly	90980-11077	L 3	License Plate Lamp (RH)	
F20	Front Seat Inner Belt (Driver's Side)	90980-10942	M 1	Mass Air Flow Meter (1GR-FE)	90980-11317
F21	Front Seat Inner Belt (Driver's Side)	90980-10860		Mass Air Flow Meter (2TR-FE)	90980-12292
F22	Front Seat Inner Belt (Driver's Side)	90980-10859	M 2	Main SW (Power Outlet AC115V)	90980-10964
F23	Front Seat Inner Belt (Driver's Side)	90980-11486	M 3	Map Lamp	90980-10908
F24	Front Seat Inner Belt (Front Passenger's Side)		N 1	Noise Filter (Ignition)	90980-10843
F25	Front Seat Inner Belt (Front Passenger's Side)	90980-11019	O 1	Outer Mirror SW	90980-11657
G 1	Generator (1GR-FE 130A Type Generator)	90980-09365	O 2	Outer Rear View Mirror (LH)	90980-12189
	Generator (1GR-FE 80A Type Generator)	90980-09372	O 3	Outer Rear View Mirror (RH)	
	Generator (2TR-FE)	90980-09212	O 4	Occupant Classification ECU	90980-12357
G 2	Generator	90980-11964	O 5	Occupant Classification ECU	90980-12356
H 1	Headlamp (LH)	90980-11314	O 6	Occupant Classification Sensor (Front LH)	90980-12353
H 2	Headlamp (RH)		O 7	Occupant Classification Sensor (Front RH)	90980-12354
H 3	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	O 8	Occupant Classification Sensor (Rear LH)	
H 4	Heated Oxygen Sensor (Bank 2 Sensor 2)		O 9	Occupant Classification Sensor (Rear RH)	90980-12353
H 5	Horn (High)	90980-10619	O10	Occupant Classification ECU	90980-AA009
H 6	Horn (Low)		O11	Occupant Classification Sensor	90980-AA011
H 7	Hazard Warning Signal SW Assembly	90980-11911	P 1	Park/Neutral Position SW	90980-12362
I 1	Ignition Coil (No.1)	90980-11885	P 2	Parking Lamp (LH)	90980-11156
I 2	Ignition Coil (No.2)		P 3	Parking Lamp (RH)	
I 3	Ignition Coil (No.3)		P 4	Power Steering Oil Pressure SW	90980-11428
I 4	Ignition Coil (No.4)		P 5	Pressure SW	90980-11149
I 5	Ignition Coil (No.5)		P 6	Parking Brake SW	90980-10871
I 6	Ignition Coil (No.6)		P 7	Power Point Socket	90980-10760
I 7	Ignition SW	90980-11615	P 8	Power Point Socket	90980-11194
I 8	Inner Rear View Mirror	90980-11794	P 9	Power Window Master SW (Double Cab)	90980-12122
J 1	Junction Connector	90980-10976		Power Window Master SW (Except Double Cab)	90980-10997
J 2	Junction Connector	90980-11542			
J 3	Junction Connector				

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
P10	Power Window Regulator Motor (Front LH)	90980-10797	S23	Stereo Component Amplifier	90980-12200
P11	Power Window Regulator Motor (Front RH)		S24	Stereo Component Amplifier	90980-10821
P12	Power Window Regulator Motor (Rear LH)		S25	Seat Position Airbag Sensor (Driver's Side)	90980-12416
P13	Power Window Regulator Motor (Rear RH)		S26	Side Airbag Squib (LH)	90980-11864
P14	Power Window SW (Front Passenger's Side)	90980-10789	S27	Side Airbag Squib (RH)	
P15	Power Window SW (Rear LH)	90980-10631	S28	Seat Position Airbag Sensor (Front Passenger's Side)	90980-12195
P16	Power Window SW (Rear RH)		S29	Seat Belt Tension Sensor	90980-11349
R 1	Radio Receiver Assembly (Built-in Type Amplifier)	90980-10997	T 1	Throttle Body Assembly	90980-11858
	Radio Receiver Assembly (Separate Type Amplifier)	90980-12038	T 2	Transfer Indicator SW (4WD Position)	90980-11250
R 2	Radio Receiver Assembly	90980-10996	T 3	Transfer Indicator SW (L4 Position)	90980-11025
R 3	Radio Receiver Assembly	90980-12259	T 4	Transfer Shift Actuator Assembly	90980-11858
R 4	Rheostat	90980-10797	T 5	Transmission Revolution Sensor (Electronically Controlled Transmission)	90980-11156
R 5	Rear Combination Lamp (LH)	90980-10988	T 6	Transmission Revolution Sensor (Turbine)	
R 6	Rear Combination Lamp (RH)		T 7	Towing Brake Controller	90980-11603
R 7	Room Lamp (Center)	90980-10908	T 8	Towing Converter Relay	90980-11535
S 1	Skid Control ECU with Actuator (w/ VSC)	90980-12297	T 9	Transponder Key Amplifier	90980-12092
	Skid Control ECU with Actuator (w/o VSC)	90980-12426	T10	Transponder Key ECU	90980-12423
S 2	Skid Control ECU with Actuator	90980-12294	T11	Turn Signal Flasher	90980-10803
S 3	Speed Sensor (Front LH)	90980-11003	T12	Trailer Socket	82824-34050
S 4	Speed Sensor (Front RH)		T13	Transfer Indicator SW (Rear Diff.)	90980-11250
S 5	Starter (1GR-FE)	90980-09463	T14	Tire Pressure Monitor ECU	90980-12155
	Starter (2TR-FE)	90980-09506	T15	Tire Pressure Warning SW (Reset)	90980-10906
S 6	Starter	90980-11400	T16	Tire Pressure Monitor Receiver	90980-11909
S 7	Shift Lock Control ECU	90980-12183	U 1	Unlock Warning SW	90980-12063
S 8	Spiral Cable		V 1	Vehicle Speed Sensor (Combination Meter)	90980-11143
S 9	Steering Sensor	90980-12162	V 2	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
S10	Stop Lamp SW	90980-11118			
S11	Side Airbag Sensor (Front LH)	90980-12225	V 4	VSV (Purge)	
S12	Side Airbag Sensor (Front RH)		V 5	VVT Sensor LH	90980-12353
S13	Side Airbag Sensor (Rear LH)	90980-12352	V 6	VVT Sensor RH	
S14	Side Airbag Sensor (Rear RH)		V 7	VSC Warning Buzzer	90980-10906
S15	Speaker (Front Door LH)	90980-10935	V 8	Voltage Inverter	90980-10803
S16	Speaker (Front Door RH)		V 9	Voltage Inverter	90980-12299
S17	Speaker (Rear Door LH)		W 1	Windshield Washer Motor	90980-11019
S18	Speaker (Rear Door RH)		W 2	Windshield Wiper Motor	90980-11599
S19	Speaker (Squawker LH)	90980-11013	Y 1	Yaw Rate Sensor	90980-11904
S20	Speaker (Squawker RH)		Z 1	Option Connector (Towing Converter Relay)	90980-11535
S21	Speaker (Woofer)	90980-10795	Z 2	Option Connector (Trailer Socket)	90980-10795
S22	Speed Sensor (Rear)	90980-10942	Z 3	Option Connector (TVIP)	

Note: Not all of the above part numbers of the connector are established for the supply.

