

DTC	P0136	Oxygen Sensor Circuit Malfunction (Bank 1 Sensor 2)
DTC	P0137	Oxygen Sensor Circuit Low Voltage (Bank 1 Sensor 2)
DTC	P0138	Oxygen Sensor Circuit High Voltage (Bank 1 Sensor 2)
DTC	P0156	Oxygen Sensor Circuit Malfunction (Bank 2 Sensor 2)
DTC	P0157	Oxygen Sensor Circuit Low Voltage (Bank 2 Sensor 2)
DTC	P0158	Oxygen Sensor Circuit High Voltage (Bank 2 Sensor 2)

HINT:

Sensor 2 refers to the sensor mounted behind the Three-Way Catalytic Converter (TWC) and located far from the engine assembly.

DESCRIPTION


In order to obtain a high purification rate of the carbon monoxide (CO), hydrocarbon (HC) and nitrogen oxide (NOx) components in the exhaust gas, a TWC (Three-Way Catalytic Converter) is used. For the most efficient use of the TWC, the air-fuel ratio must be precisely controlled so that it is always close to the stoichiometric air-fuel level. For the purpose of helping the ECM to deliver accurate air-fuel ratio control, a Heated Oxygen (HO2) sensor is used.

The HO2 sensor is located behind the TWC, and detects the oxygen concentration in the exhaust gas. Since the sensor is integrated with the heater that heats the sensing portion, it is possible to detect the oxygen concentration even when the intake air volume is low (the exhaust gas temperature is low).

When the air-fuel ratio becomes lean, the oxygen concentration in the exhaust gas is rich. The HO2 sensor informs the ECM that the post-TWC air-fuel ratio is lean (low voltage, i.e. less than 0.45 V).

Conversely, when the air-fuel ratio is richer than the stoichiometric air-fuel level, the oxygen concentration in the exhaust gas becomes lean. The HO2 sensor informs the ECM that the post-TWC air-fuel ratio is rich (high voltage, i.e. more than 0.45 V). The HO2 sensor has the property of changing its output voltage drastically when the air-fuel ratio is close to the stoichiometric level.

The ECM uses the supplementary information from the HO2 sensor to determine whether the air-fuel ratio after the TWC is rich or lean, and adjusts the fuel injection time accordingly. Thus, if the HO2 sensor is working improperly due to internal malfunctions, the ECM is unable to compensate for deviations in the primary air-fuel ratio control.

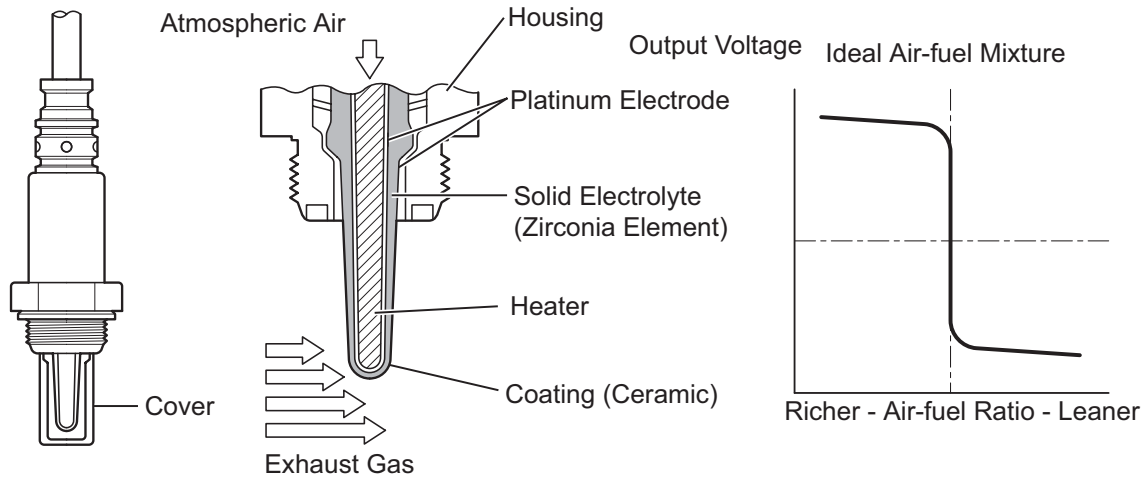

ES

P

A115539E03

DTC No.	DTC Detection Conditions	Trouble Areas
P0136 P0156	<ul style="list-style-type: none"> Abnormal voltage output: During active air-fuel ratio control, following conditions (a) and (b) met for certain period of time (2 trip detection logic) <ul style="list-style-type: none"> (a) Heated Oxygen (HO2) sensor voltage does not decrease to less than 0.21 V (b) HO2 sensor voltage does not increase to more than 0.59 V Low impedance: Sensor impedance less than 5 Ω for more than 30 seconds when ECM presumes sensor to being warmed up and operating normally (2 trip detection logic) 	<ul style="list-style-type: none"> Open or short in HO2 sensor (bank 1, 2 sensor 2) circuit HO2 sensor (bank 1, 2 sensor 2) HO2 sensor heater (bank 1, 2 sensor 2) Air-Fuel Ratio (A/F) sensor (bank 1, 2 sensor 1) EFI relay Gas leakage from exhaust system
P0137 P0157	<ul style="list-style-type: none"> Low voltage (open): During active air-fuel ratio control, following conditions (a) and (b) met for certain period of time (2 trip detection logic) <ul style="list-style-type: none"> (a) HO2 sensor voltage output less than 0.21 V (b) Target air-fuel ratio rich High impedance: Sensor impedance 15 kΩ or more for more than 90 seconds when ECM presumes sensor to being warmed up and operating normally (2 trip detection logic) 	<ul style="list-style-type: none"> Open in HO2 sensor (bank 1, 2 sensor 2) circuit HO2 sensor (bank 1, 2 sensor 2) HO2 sensor heater (bank 1, 2 sensor 2) EFI relay Gas leakage from exhaust system
P0138 P0158	<ul style="list-style-type: none"> High voltage (short): During active air-fuel ratio control, following conditions (a) and (b) met for certain period of time (2 trip detection logic) <ul style="list-style-type: none"> (a) HO2 sensor voltage output 0.59 V or more (b) Target air-fuel ratio lean Extremely high voltage (short): HO2 sensor voltage output exceeds 1.2 V for more than 10 seconds (2 trip detection logic) 	<ul style="list-style-type: none"> Short in HO2 sensor (bank 1, 2 sensor 2) circuit HO2 sensor (bank 1, 2 sensor 2) ECM internal circuit malfunction

MONITOR DESCRIPTION


1. Active Air-Fuel Ratio Control

The ECM usually performs air-fuel ratio feedback control so that the Air-Fuel Ratio (A/F) sensor output indicates a near stoichiometric air-fuel level. This vehicle includes active air-fuel ratio control in addition to regular air-fuel ratio control. The ECM performs active air-fuel ratio control to detect any deterioration in the Three-Way Catalytic Converter (TWC) and Heated Oxygen (HO₂) sensor malfunctions (refer to the diagram below).

Active air-fuel ratio control is performed for approximately 15 to 20 seconds while driving with a warm engine. During active air-fuel ratio control, the air-fuel ratio is forcibly regulated to become lean or rich by the ECM. If the ECM detects a malfunction, one of the following DTCs is set: DTC P0136 or P0156 (abnormal voltage output), P0137 or P0157 (open circuit) or P0138 or P0158 (short circuit).

2. Abnormal Voltage Output of HO₂ Sensor (DTCs P0136 and P0156)

While the ECM is performing active air-fuel ratio control, the air-fuel ratio is forcibly regulated to become rich or lean. If the sensor is not functioning properly, the voltage output variation is small. For example, when the HO₂ sensor voltage does not decrease to less than 0.21 V and does not increase to more than 0.59 V during active air-fuel ratio control, the ECM determines that the sensor voltage output is abnormal and sets DTCs P0136 and P0156.

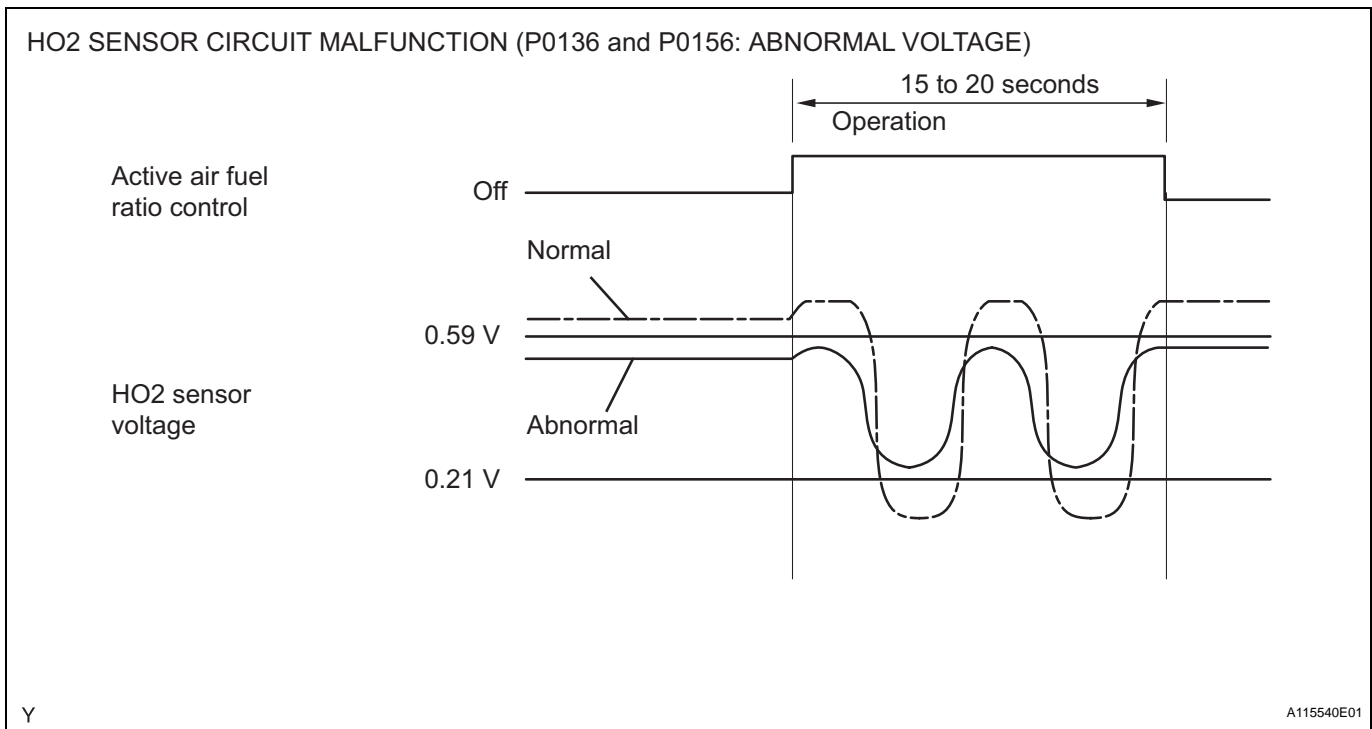

3. Open or Short in Heated Oxygen (HO₂) Sensor Circuit (DTCs P0137 and P0157 or P0138 and P0158)

During active air-fuel ratio control, the ECM calculates the Oxygen Storage Capacity (OSC)* of the Three-Way Catalytic Converter (TWC) by forcibly regulating the air-fuel ratio to become rich or lean. If the HO₂ sensor has an open or short, or the voltage output of the sensor noticeably decreases, the OSC indicates an extraordinarily high value. Even if the ECM attempts to continue regulating the air-fuel ratio to become rich or lean, the HO₂ sensor output does not change.


While performing active air-fuel ratio control, when the target air-fuel ratio is rich and the HO₂ sensor voltage output is 0.21 V or less (lean), the ECM interprets this as an abnormally low sensor output voltage and sets DTC P0137 or P0157. When the target air-fuel ratio is lean and the voltage output is 0.59 V or more (rich) during active air-fuel ratio control, the ECM determines that the sensor voltage output is abnormally high, and sets DTC P0138 or P0158.

HINT:

DTC P0138 or P0158 is also set if the HO₂ sensor voltage output is more than 1.2 V for 10 seconds or more.


*: The TWC has the capability to store oxygen. The OSC and the emission purification capacity of the TWC are mutually related. The ECM determines whether the catalyst has deteriorated, based on the calculated OSC value (See page ES-203).


HO2 SENSOR CIRCUIT LOW VOLTAGE (P0137 and P0157: OPEN)

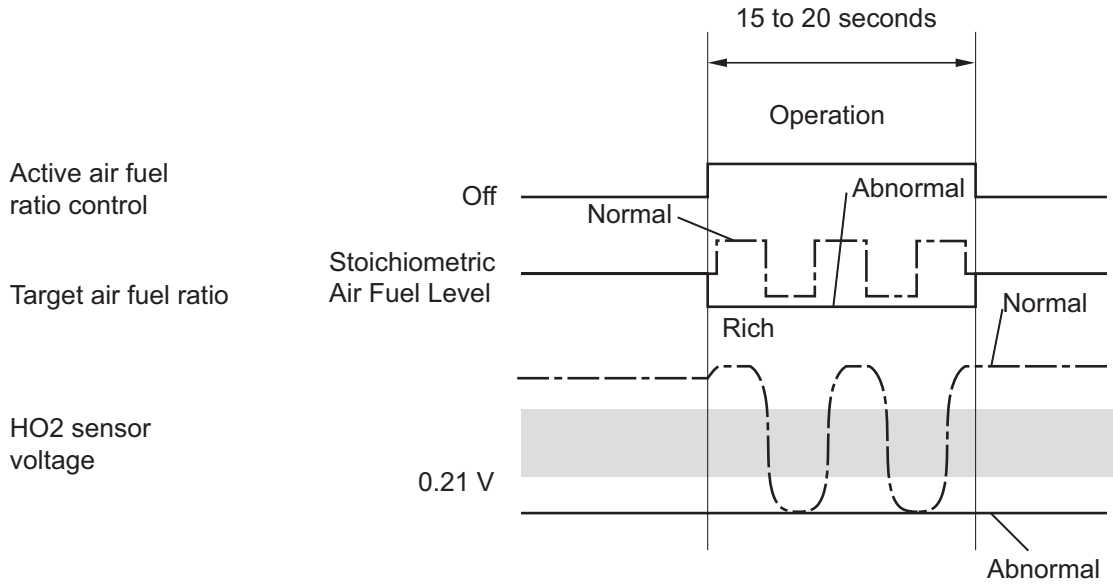

ES

HO2 SENSOR CIRCUIT HIGH VOLTAGE (P0138 and P0158: SHORT)

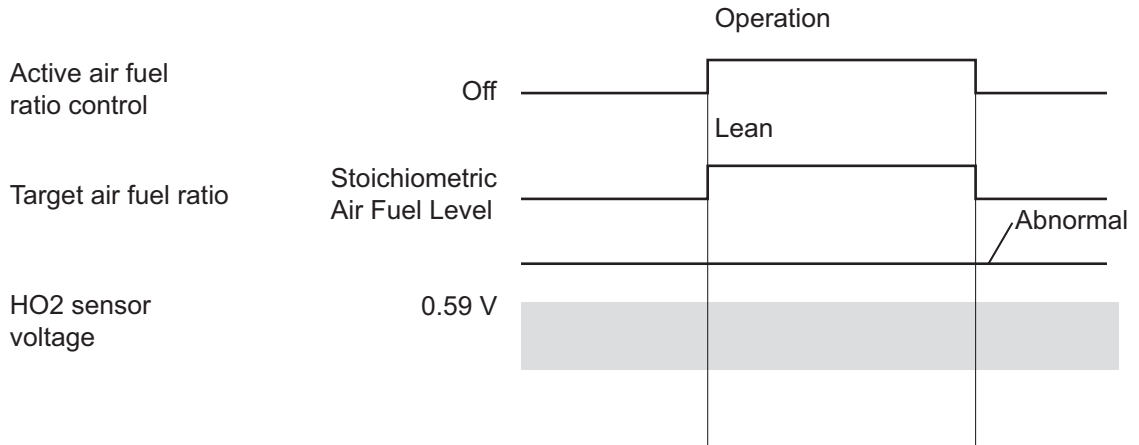

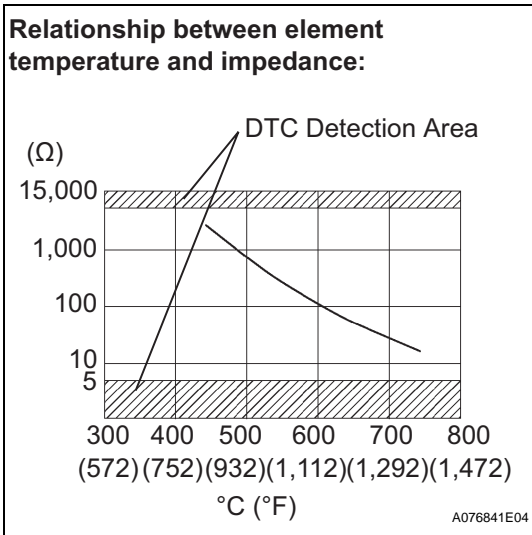

4. High or Low Impedance of Heated Oxygen (HO2) Sensor (DTCs P0136 and P0156 or P0137 and P0157)

During normal air-fuel ratio feedback control, there are small variations in the exhaust gas oxygen concentration. In order to continuously monitor the slight variation of the HO2 sensor signal while the engine is running, the impedance* of the sensor is measured by the ECM. The ECM determines that there is a malfunction in the sensor when the measured impedance deviates from the standard range.

*: The effective resistance in an alternating current electrical circuit.

HINT:

- The impedance cannot be measured using an ohmmeter.
- DTCs P0136 and P0156 indicate the deterioration of the HO2 sensor. The ECM sets the DTCs by calculating the impedance of the sensor when the typical enabling conditions are satisfied (2 driving cycle).
- DTCs P0137 and P0157 indicate an open or short circuit in the HO2 sensor (2 driving cycle). The ECM sets the DTCs when the impedance of the sensor exceeds the threshold 15 kΩ.

MONITOR STRATEGY

Related DTCs	P0136: Heated oxygen sensor output voltage (Output voltage) (bank 1) P0136: Heated oxygen sensor impedance (Low) (bank 1) P0137: Heated oxygen sensor output voltage (Low voltage) (bank 1) P0137: Heated oxygen sensor impedance (High) (bank 1) P0138: Heated oxygen sensor output voltage (High voltage) (bank 1) P0138: Heated oxygen sensor output voltage (Extremely high) (bank 1) P0156: Heated oxygen sensor output voltage (Output voltage) (bank 2) P0156: Heated oxygen sensor impedance (Low) (bank 2) P0157: Heated oxygen sensor output voltage (Low voltage) (bank 2) P0157: Heated oxygen sensor impedance (High) (bank 2) P0158: Heated oxygen sensor output voltage (High voltage) (bank 2) P0158: Heated oxygen sensor impedance (Extremely high) (bank 2)
Required Sensors/Components (Main)	Heated oxygen sensor
Required Sensors/Components (Related)	Crankshaft position sensor, engine coolant temperature sensor, mass air flow meter and throttle position sensor
Frequency of Operation	Once per driving cycle: Active air-fuel ratio control detection Continuous: Others
Duration	20 seconds: Heated oxygen sensor output (Output voltage, High voltage, Low voltage) 30 seconds: Heated oxygen sensor impedance (Low) 90 seconds: Heated oxygen sensor impedance (High) 10 seconds: Heated oxygen sensor voltage (Extremely high)
MIL Operation	2 driving cycles
Sequence of Operation	None

TYPICAL ENABLING CONDITIONS**All:**

Monitor runs whenever following DTCs not present	P0031, P0032, P0051, P0052 (A/F sensor heater - Sensor 1) P0037, P0038, P0057, P0058 (O2 sensor heater - Sensor 2) P0100 - P0103 (MAF meter) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor) P0120 - P0223, P2135 (TP sensor) P0125 (Insufficient ECT for closed loop) P0171, P0172 (Fuel system) P0300 - P0306 (Misfire) P0335 (CKP sensor) P0340 (CMP sensor) P0500 (VSS) P2196, P2198 (A/F sensor - rationality) P2A00, P2A03 (A/F sensor - slow response)
--	--

ES

Heated Oxygen Sensor Output Voltage (Output Voltage, High Voltage and Low Voltage):

Active air-fuel ratio control	Executing
Active air-fuel ratio control begins when all of following conditions met:	-
Battery voltage	11 V or more
Engine coolant temperature	75 °C (167°F) or more
Idling	OFF
Engine RPM	Less than 3,200 rpm
A/F sensor status	Activated
Fuel system status	closed loop
Fuel cut	OFF (for 10 seconds or more)
Engine load	10 to 70 %
Shift position	4 th or more

Heated Oxygen Sensor Impedance (Low):

Battery voltage	11 V or more
Estimated sensor temperature	Less than 700°C (1,292°F)
ECM monitor	Completed
DTC P0606	Not set

Heated Oxygen Sensor Impedance (High):

Battery voltage	11 V or more
Estimated sensor temperature	520°C (968°F) or more
ECM monitor	Completed
DTC P0606	Not set

Heated Oxygen Sensor Output Voltage (Extremely High):

Battery voltage	11 V or more
Time after engine start	2 seconds or more

TYPICAL MALFUNCTION THRESHOLDS**Heated Oxygen Sensor Output Voltage (Output voltage):**

Either of following conditions met:	1 or 2
1. All of following conditions (a), (b) and (c) met	-
(a) Commanded air-fuel ratio	14.3 or less
(b) Rear HO2 sensor voltage	0.21 to 0.59 V
(c) OSC (Oxygen Storage Capacity of Catalyst)	2.5 g or more
2. All of following conditions (d), (e) and (f) met	-
(d) Commanded air-fuel ratio	14.9 or more

(e) Rear HO2 sensor voltage	0.21 to 0.59 V
(f) OSC	2.5 g or more

Heated Oxygen Sensor Output Voltage (Low output voltage):

All of following conditions (a), (b) and (c) met	-
(a) Commanded air-fuel ratio	14.3 or less
(b) Rear HO2 sensor voltage	Less than 0.21 V
(c) OSC (Oxygen Storage Capacity of Catalyst)	2.5 g or more

Heated Oxygen Sensor Output Voltage (High output voltage):

All of following conditions (a), (b) and (c) met	-
(a) Commanded air-fuel ratio	14.9 or more
(b) Rear HO2 sensor voltage	More than 0.59 V
(c) OSC (Oxygen Storage Capacity of Catalyst)	2.5 g or more

Heated Oxygen Sensor Impedance (Low):

Duration of following condition met	30 seconds or more
Heated oxygen sensor impedance	Less than 5 Ω

Heated Oxygen Sensor Impedance (High):

Duration of following condition met	90 seconds or more
Heated oxygen sensor impedance	15 k Ω or more

Heated Oxygen Sensor Output Voltage (Extremely High):

Duration of following condition met	10 seconds or more
Heated oxygen sensor voltage	1.2 V or more


COMPONENT OPERATING RANGE

Duration of following condition met	30 seconds or more
Heated oxygen sensor voltage	Varies between 0.1 V and 0.9 V

MONITOR RESULT

Detailed information on Checking Monitor Status (See page [ES-19](#)).

WIRING DIAGRAM

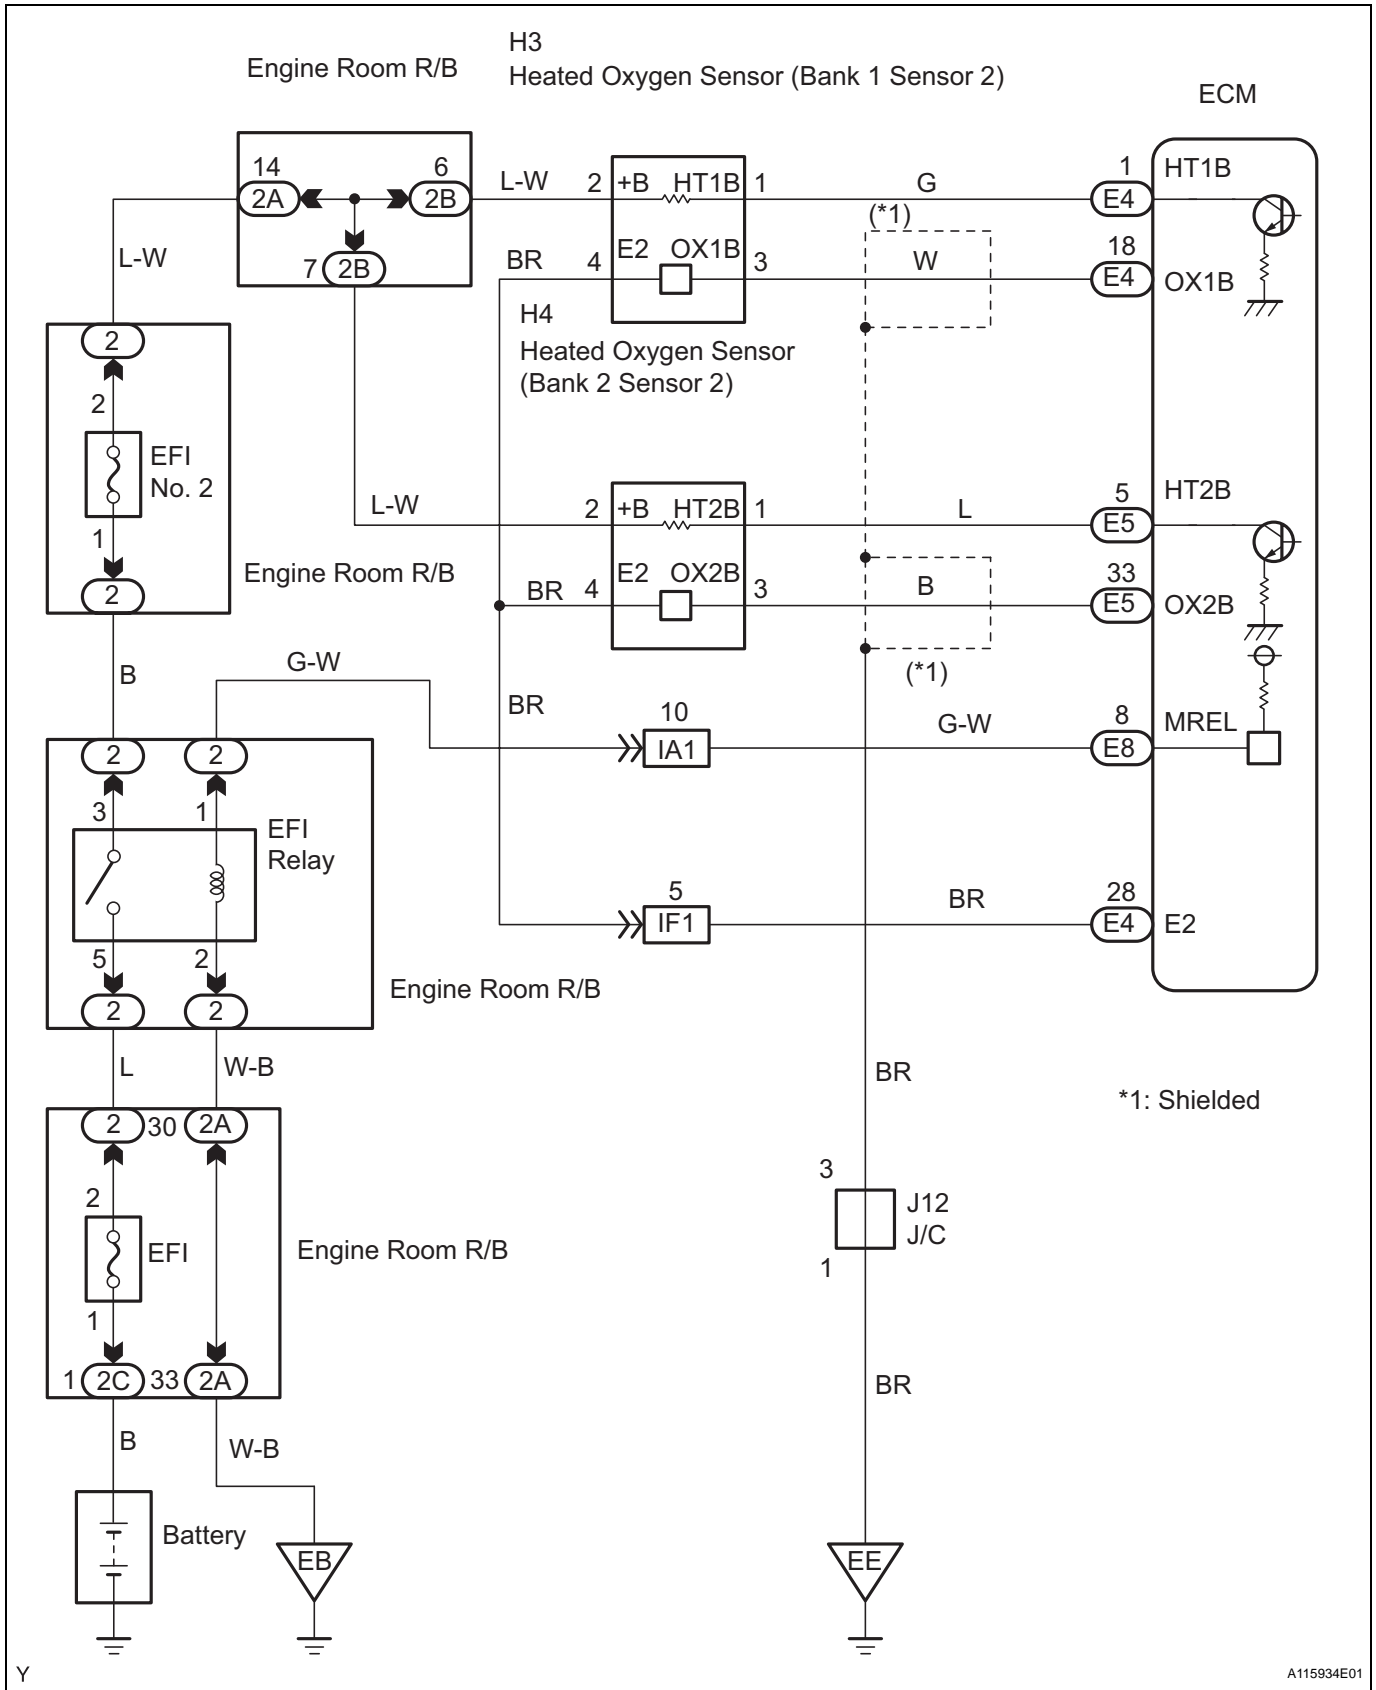

ES

CONFIRMATION DRIVING PATTERN


HINT:

- This confirmation driving pattern is used in the "PERFORM CONFIRMATION DRIVING PATTERN" procedure of the following diagnostic troubleshooting procedure.
- Performing this confirmation driving pattern will activate the Heated Oxygen (HO2) sensor monitor. (The catalyst monitor is performed simultaneously.) This is very useful for verifying the completion of a repair.

NOTICE:

This test will not be completed if the vehicle is driven under absolutely constant speed conditions such as with cruise control activated.

ES

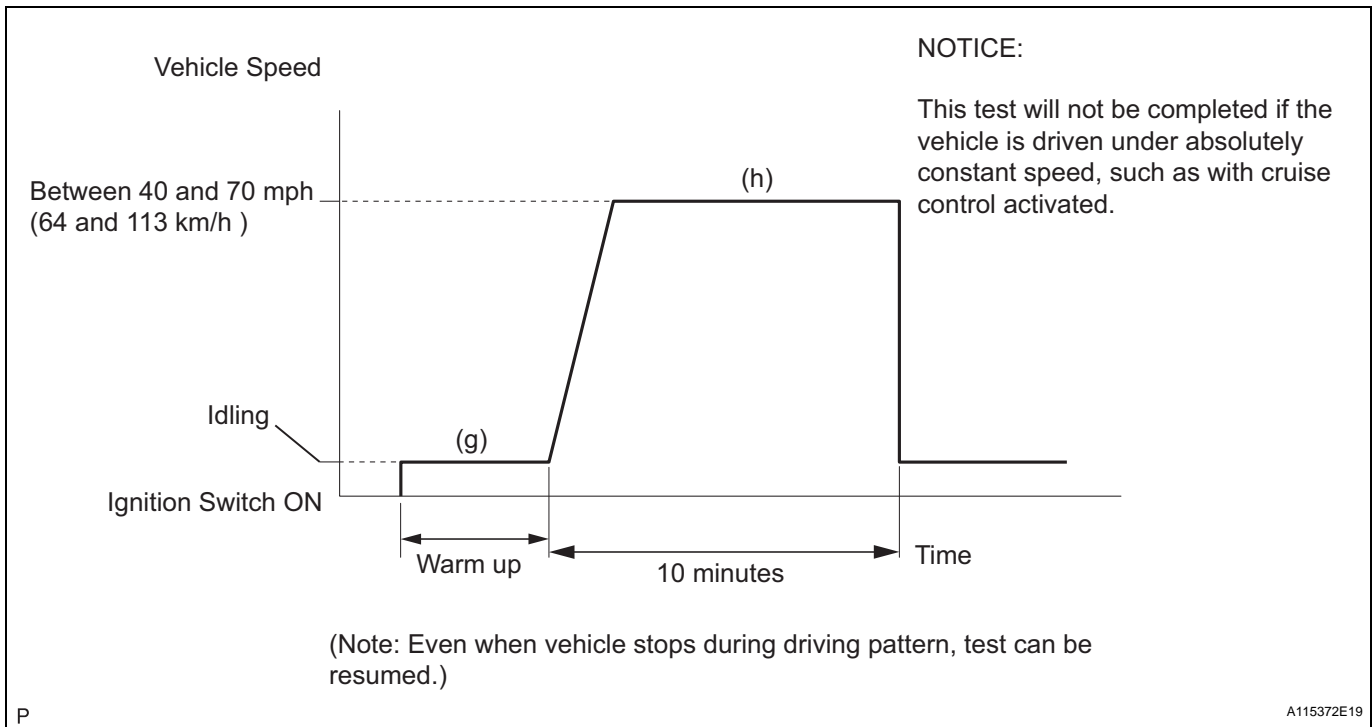

READINESS TESTS	
MISFIRE MON	AVAIL
FUEL SYS MON	AVAIL
COMP MON	AVAIL
CAT EVAL	INCMPL
HTD CAT EVAL	N/A
EVAP EVAL	INCMPL
2nd AIR EVAL	N/A
A/C EVAL	N/A
O2S EVAL	INCMPL
O2S HTR EVAL	INCMPL
EGR EVAL	N/A

A098191E02

- Connect an intelligent tester to the DLC3.
- Turn the ignition switch ON.
- Turn the tester ON.
- Clear DTCs (See page [ES-38](#)).
- Select the following menu items: DIAGNOSIS / CARB OBD II / READINESS TESTS.
- Check that O2S EVAL is INCMPL (incomplete).
- Start the engine and warm it up.
- Drive the vehicle at between 40 mph and 70 mph (64 km/h and 113 km/h) for at least 10 minutes.
- Note the state of the Readiness Tests items. Those items will change to COMPL (complete) as O2S EVAL monitor operates.

(j) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / PENDING CODES and check if any DTCs (any pending DTCs) are set.

HINT:

If O2S EVAL does not change to COMPL, and any pending DTCs fail to set, extend the driving time.

HINT:

Intelligent tester only:

Malfunctioning areas can be identified by performing the A/F CONTROL function provided in the ACTIVE TEST. The A/F CONTROL function can help to determine whether the Air-Fuel Ratio (A/F) sensor, Heated Oxygen (HO2) sensor and other potential trouble areas are malfunctioning.

The following instructions describe how to conduct the A/F CONTROL operation using an intelligent tester.

- (1) Connect an intelligent tester to the DLC3.
- (2) Start the engine and turn the tester ON.
- (3) Warm up the engine at an engine speed of 2,500 rpm for approximately 90 seconds.
- (4) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL.
- (5) Perform the A/F CONTROL operation with the engine in an idling condition (press the RIGHT or LEFT button to change the fuel injection volume).
- (6) Monitor the voltage outputs of the A/F and HO2 sensors (AFS B1S1 and O2S B1S2 or AFS B2S1 and O2S B2S2) displayed on the tester.

HINT:

- The A/F CONTROL operation lowers the fuel injection volume by 12.5 % or increases the injection volume by 25 %.
- Each sensor reacts in accordance with increases and decreases in the fuel injection volume.

Standard

Tester Display (Sensor)	Injection Volumes	Status	Voltages
AFS B1S1 or AFS B2S1 (A/F)	+25 %	Rich	Less than 3.0
AFS B1S1 or AFS B2S1 (A/F)	-12.5 %	Lean	More than 3.35
O2S B1S2 or O2S B2S2 (HO2)	+25 %	Rich	More than 0.55
O2S B1S2 or O2S B2S2 (HO2)	-12.5 %	Lean	Less than 0.4

NOTICE:

The Air-Fuel Ratio (A/F) sensor has an output delay of a few seconds and the Heated Oxygen (HO2) sensor has a maximum output delay of approximately 20 seconds.

Case	A/F Sensor (Sensor 1) Output Voltage		HO2 Sensor (Sensor 2) Output Voltage		Main Suspected Trouble Areas
1	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		-
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage More than 0.55 V Less than 0.4 V		
2	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> • A/F sensor • A/F sensor heater • A/F sensor circuit
	Output Voltage Almost no reaction		Output Voltage More than 0.55 V Less than 0.4 V		

Case	A/F Sensor (Sensor 1) Output Voltage		HO2 Sensor (Sensor 2) Output Voltage		Main Suspected Trouble Areas
3	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> HO2 sensor HO2 sensor heater HO2 sensor circuit
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage Almost no reaction		
4	Injection volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> Injector Fuel pressure Gas leakage from exhaust system (Air-fuel ratio extremely lean or rich)
	Output Voltage Almost no reaction		Output Voltage Almost no reaction		

ES

- Following the A/F CONTROL procedure enables technicians to check and graph the voltage outputs of both the A/F and HO2 sensors.
- To display the graph, select the following menu items on the tester: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL / USER DATA / AFS B1S1 and O2S B1S2 or AFS B2S1 and O2S B2S2, and press the YES button and then the ENTER button followed by the F4 button.

HINT:


- If other DTCs relating to different systems that have terminal E2 as the ground terminal are output simultaneously, terminal E2 may have an open circuit.
- Read freeze frame data using an intelligent tester. Freeze frame data record the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data, from the time the malfunction occurred.
- If the OX1B wire from the ECM connector is short-circuited to the +B wire, DTC P0136 will be set.
- If the OX2B wire from the ECM connector is short-circuited to the +B wire, DTC P0156 will be set.

1 CHECK ANY OTHER DTCs OUTPUT

- Connect an intelligent tester to the DLC3.
- Turn the ignition switch ON and turn the tester ON.
- Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- Read DTCs.

Result

Display (DTC Output)	Proceed To
P0138 or P0158	A
P0137 or P0157	B
P0136 or P0156	C

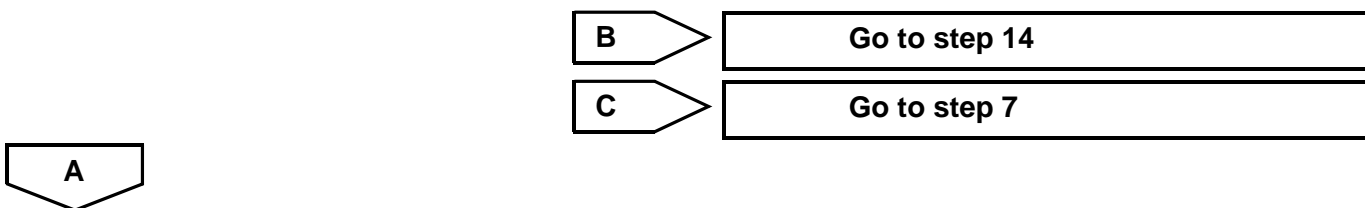

2 READ VALUE OF INTELLIGENT TESTER (OUTPUT VOLTAGE OF HEATED OXYGEN SENSOR)

- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DATA LIST / PRIMARY / O2S B1S2 or O2S B2S2.
- (d) Allow the engine to idle.
- (e) Read the Heated Oxygen (HO2) sensor output voltage while idling.


Result

HO2 Sensor Output Voltages	Proceed To
More than 1.2 V	A
Less than 1.0 V	B

B → **Go to step 5**

A

3 CHECK HARNESS AND CONNECTOR (CHECK FOR SHORT)

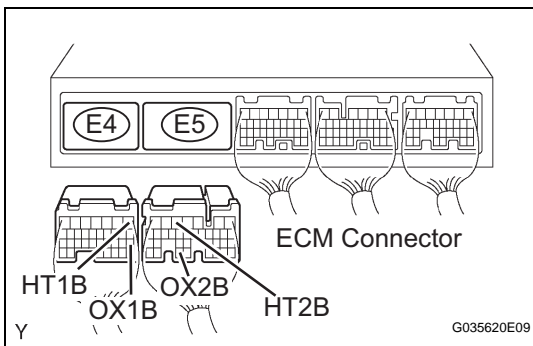

- (a) Turn the ignition switch OFF and wait for 5 minutes.
- (b) Disconnect the E4 or E5 ECM connector.
- (c) Check the resistance.

Standard Resistance

Tester Connections	Specified Conditions
HT1B (E4-1) - OX1B (E4-18)	10 kΩ or higher
HT2B (E5-5) - OX2B (E5-33)	


- (d) Reconnect the ECM connector.

NG → **Go to step 4**

OK

REPLACE ECM

4 INSPECT HEATED OXYGEN SENSOR (CHECK FOR SHORT)

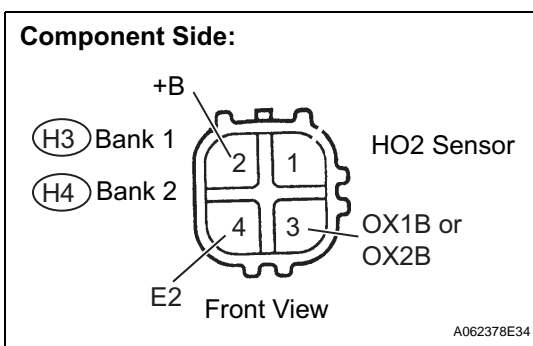

- (a) Disconnect the H3 or H4 HO2 sensor connector.
- (b) Check the resistance.

Standard Resistance

Tester Connections	Specified Conditions
+B (2) - E2 (4)	10 kΩ or higher
+B (2) - OX1B or OX2B (3)	

- (c) Reconnect the HO2 sensor connector.

NG → **REPLACE HEATED OXYGEN SENSOR**

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR

5 PERFORM CONFIRMATION DRIVING PATTERN

NEXT

ES

6 CHECK WHETHER DTC OUTPUT RECURS (DTC P0138 or P0158)

- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (d) Read DTCs.

Result

Display (DTC Output)	Proceed To
P0138 or P0158	A
No output	B

B CHECK FOR INTERMITTENT PROBLEMS

A

REPLACE HEATED OXYGEN SENSOR

7 READ VALUE OF INTELLIGENT TESTER (OUTPUT VOLTAGE OF HEATED OXYGEN SENSOR)

- (a) Connect an intelligent tester to the DLC3.
 - (b) Turn the ignition switch ON and turn the tester ON.
 - (c) Start the engine.
 - (d) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DATA LIST / PRIMARY / O2S B1S2 or O2S B2S2.
 - (e) After warming up the engine, run the engine at an engine speed of 2,500 rpm for 3 minutes.
 - (f) Read the output voltage of the HO2 sensor when the engine rpm is suddenly increased.
- HINT:
Quickly accelerate the engine to 4,000 rpm 3 times using the accelerator pedal.

Standard:

Fluctuates between 0.4 V or less and 0.5 V or more.

NG Go to step 14

OK

8 PERFORM CONFIRMATION DRIVING PATTERN

NEXT

9 CHECK WHETHER DTC OUTPUT RECURS (DTC P0136 or P0156)

- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (d) Read DTCs.

Result

Display (DTC Output)	Proceed To
P0136 or P0156	A
No output	B

B

CHECK FOR INTERMITTENT PROBLEMS

A

10 REPLACE HEATED OXYGEN SENSOR

NEXT

11 PERFORM CONFIRMATION DRIVING PATTERN

NEXT

12 CHECK WHETHER DTC OUTPUT RECURS (DTC P0136 or P0156)

- (a) Connect an intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (d) Read DTCs.

Result

Display (DTC Output)	Proceed To
P0136 or P0156	A
No output	B

B

REPAIR COMPLETED

A

13	PERFORM ACTIVE TEST USING INTELLIGENT TESTER (INJECTION VOLUME)
-----------	--

- (a) Connect an intelligent tester to the DLC3.
- (b) Start the engine and turn the tester ON.
- (c) Warm up the engine.
- (d) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / INJ VOL.
- (e) Change the fuel injection volume using the tester, monitoring the voltage output of Air-Fuel Ratio (A/F) and HO2 sensors displayed on the tester.

HINT:


- Change the fuel injection volume within the range of -12 % and +12 %. The injection volume can be changed in 1 % graduations within the range.
- The A/F sensor is displayed as AFS B1S1 or AFS B2S1, and the HO2 sensor is displayed as O2S B1S2 or O2S B2S2, on intelligent testers.

Result

Tester Display (Sensor)	Voltage Variations	Proceed To
AFS B1S1 (A/F) AFS B2S1 (A/F)	Alternates between more and less than 3.3 V	OK
AFS B1S1 (A/F) AFS B2S1 (A/F)	Remains at more than 3.3 V	NG
AFS B1S1 (A/F) AFS B2S1 (A/F)	Remains at less than 3.3 V	NG

HINT:

A normal HO2 sensor voltage (O2S B1S2 or O2S B2S2) reacts in accordance with increases and decreases in fuel injection volumes. When the A/F sensor voltage remains at either less or more than 3.3 V despite the HO2 sensor indicating a normal reaction, the A/F sensor is malfunctioning.

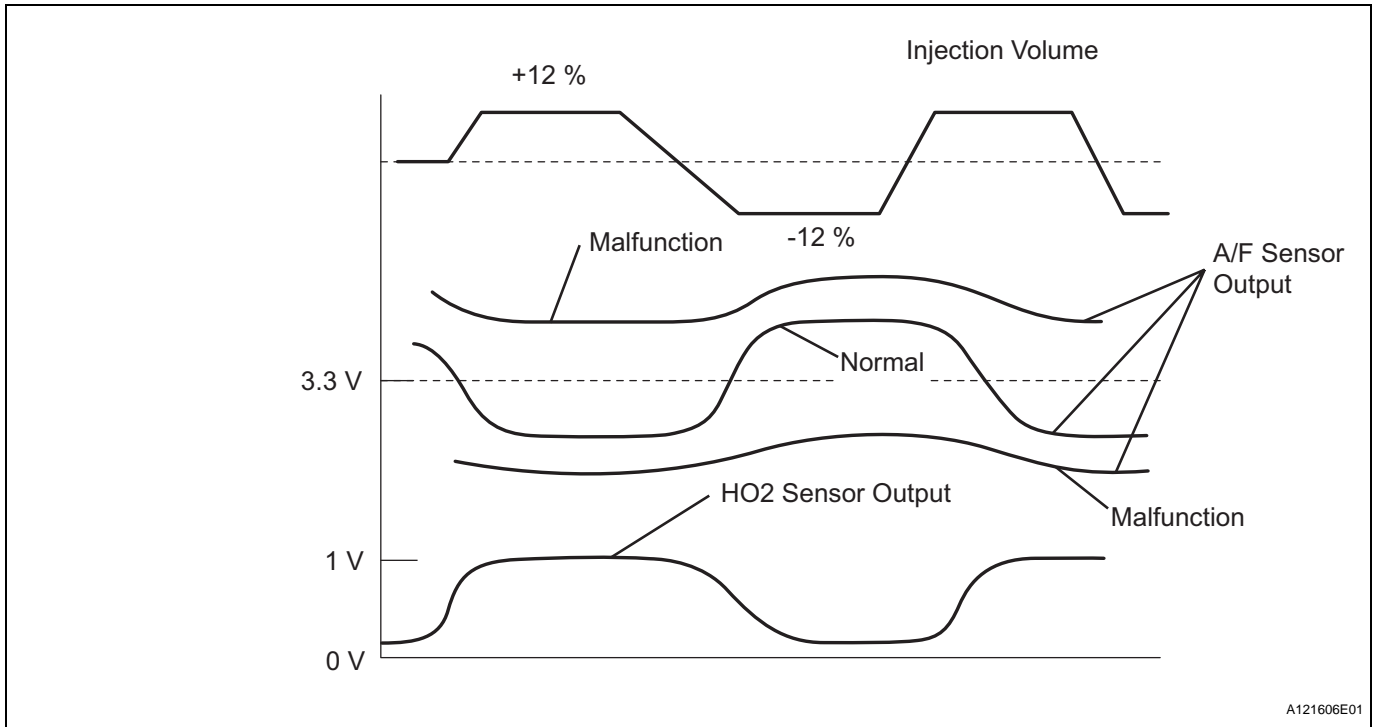

A121606E01

NG → **REPLACE AIR FUEL RATIO SENSOR**

ES

OK

CHECK AND REPAIR EXTREMELY RICH OR LEAN ACTUAL AIR FUEL RATIO (INJECTOR, FUEL PRESSURE, GAS LEAKAGE FROM EXHAUST SYSTEM, ETC.)


14 CHECK EXHAUST GAS LEAKAGE

OK:
No gas leakage.

NG → **REPAIR OR REPLACE EXHAUST GAS LEAKAGE POINT**

OK

15 INSPECT HEATED OXYGEN SENSOR (HEATER RESISTANCE)

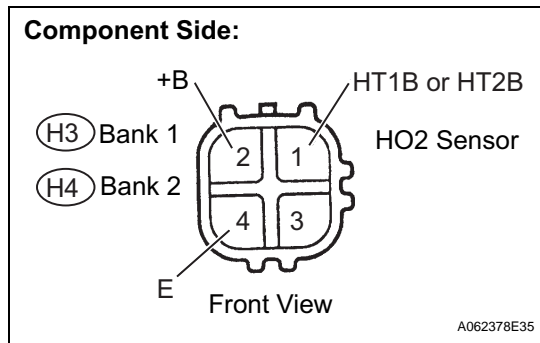

- (a) Disconnect the H3 or H4 HO2 sensor connector.
- (b) Measure the resistance between the terminals of the HO2 sensor connector.

Standard Resistance


Tester Connections	Specified Conditions
HT1B or HT2B (1) - +B (2)	11 to 16 Ω at 20°C (68°F)
HT1B or HT2B (1) - E2 (4)	10 kΩ or higher

- (c) Reconnect the HO2 sensor connector.

NG → **REPLACE HEATED OXYGEN SENSOR**

OK

16 INSPECT EFI RELAY

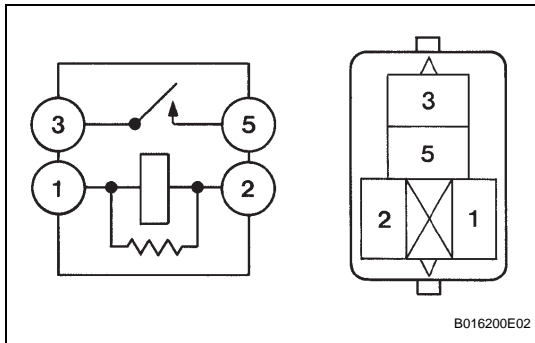

- (a) Remove the EFI relay from the engine room R/B.
- (b) Check the EFI relay resistance.

Standard Resistance


Terminal Connections	Specified Conditions
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage applied to terminals 1 and 2)

- (c) Reinstall the EFI relay.

NG **REPLACE EFI RELAY**

OK

17 CHECK HARNESS AND CONNECTOR (HEATED OXYGEN SENSOR - ECM)

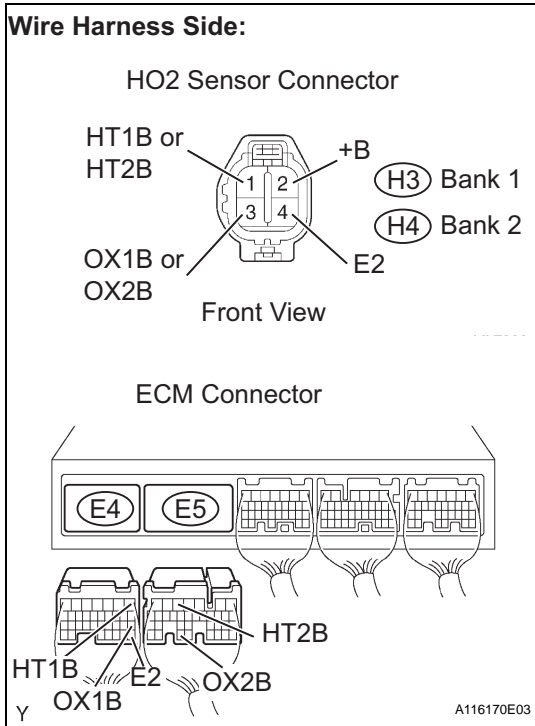

- (a) Disconnect the H3 or H4 HO2 sensor connector.
- (b) Turn the ignition switch ON.
- (c) Measure the voltage between the +B terminal of the HO2 sensor connector and body ground.

Standard Voltage

Terminal Connections	Specified Conditions
+B (H3-2) - Body ground	9 to 14 V
+B (H4-2) - Body ground	

- (d) Turn the ignition switch OFF.
- (e) Disconnect the E4 and E5 ECM connectors.
- (f) Check the resistance.

Standard Resistance (Check for open)


Terminal Connections	Specified Conditions
HT1B (H3-1) - HT1B (E4-1)	Below 1 Ω
OX1B (H3-3) - OX1B (E4-18)	
E2 (H3-4) - E2 (E4-28)	
HT2B (H4-1) - HT2B (E5-5)	
OX2B (H4-3) - OX2B (E5-33)	
E2 (H4-4) - E2 (E4-28)	

Standard Resistance (Check for short)

Terminal Connections	Specified Conditions
HT1B (H3-1) or HT1B (E4-1) - Body ground	10 kΩ or higher
OX1B (H3-3) or OX1B (E4-18) - Body ground	
HT2B (H4-1) or HT2B (E5-5) - Body ground	
OX2B (H4-3) or OX2B (E5-33) - Body ground	

- (g) Reconnect the HO2 sensor connector.
- (h) Reconnect the ECM connectors.

ES

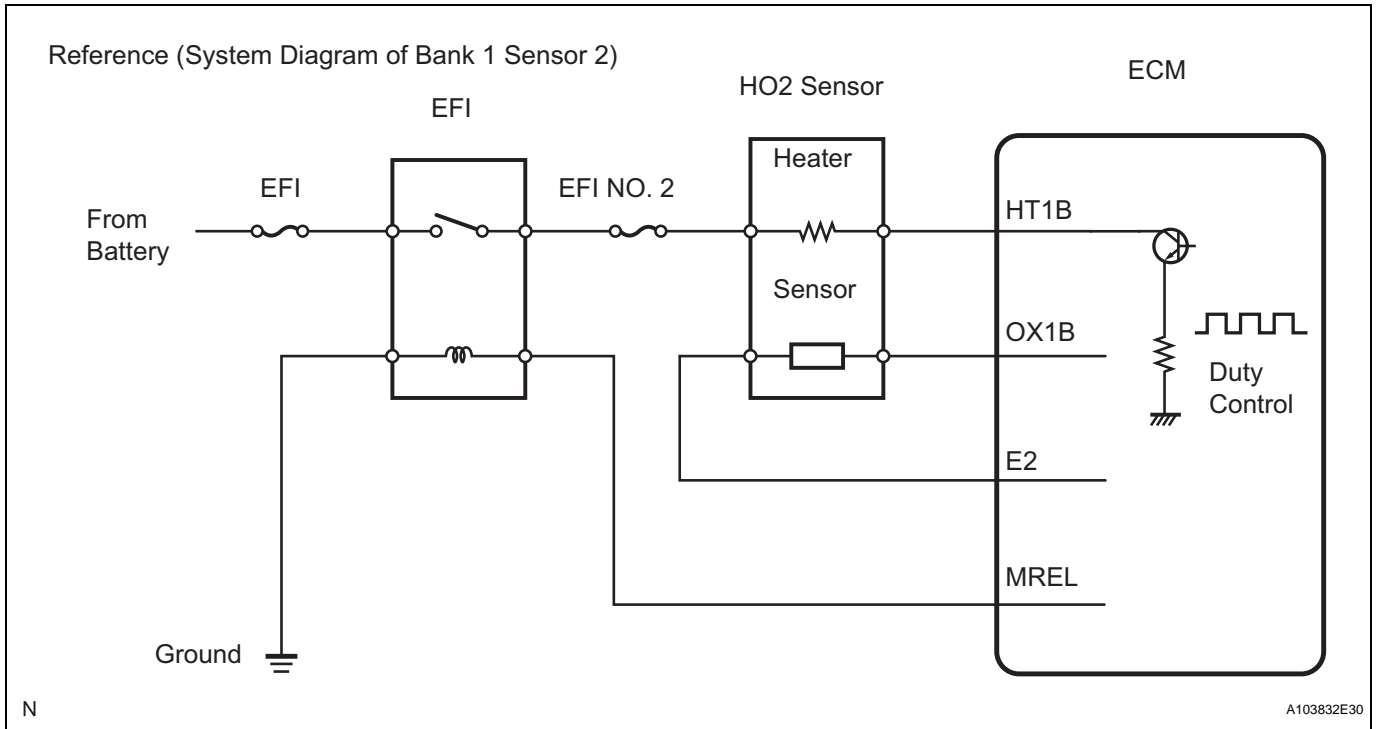

ES

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE HEATED OXYGEN SENSOR