


ECM Power Source Circuit

DESCRIPTION

When the ignition switch is turned ON, the battery voltage is applied to terminal IGSW of the ECM. The ECM MREL output signal causes a current to flow to the coil, closing the contacts of the EFI relay and supplying power to terminal +B of the ECM.


If the ignition switch is turned OFF, the ECM holds the EFI relay ON for a maximum of 2 seconds to allow for the initial setting of the throttle valve.

WIRING DIAGRAM

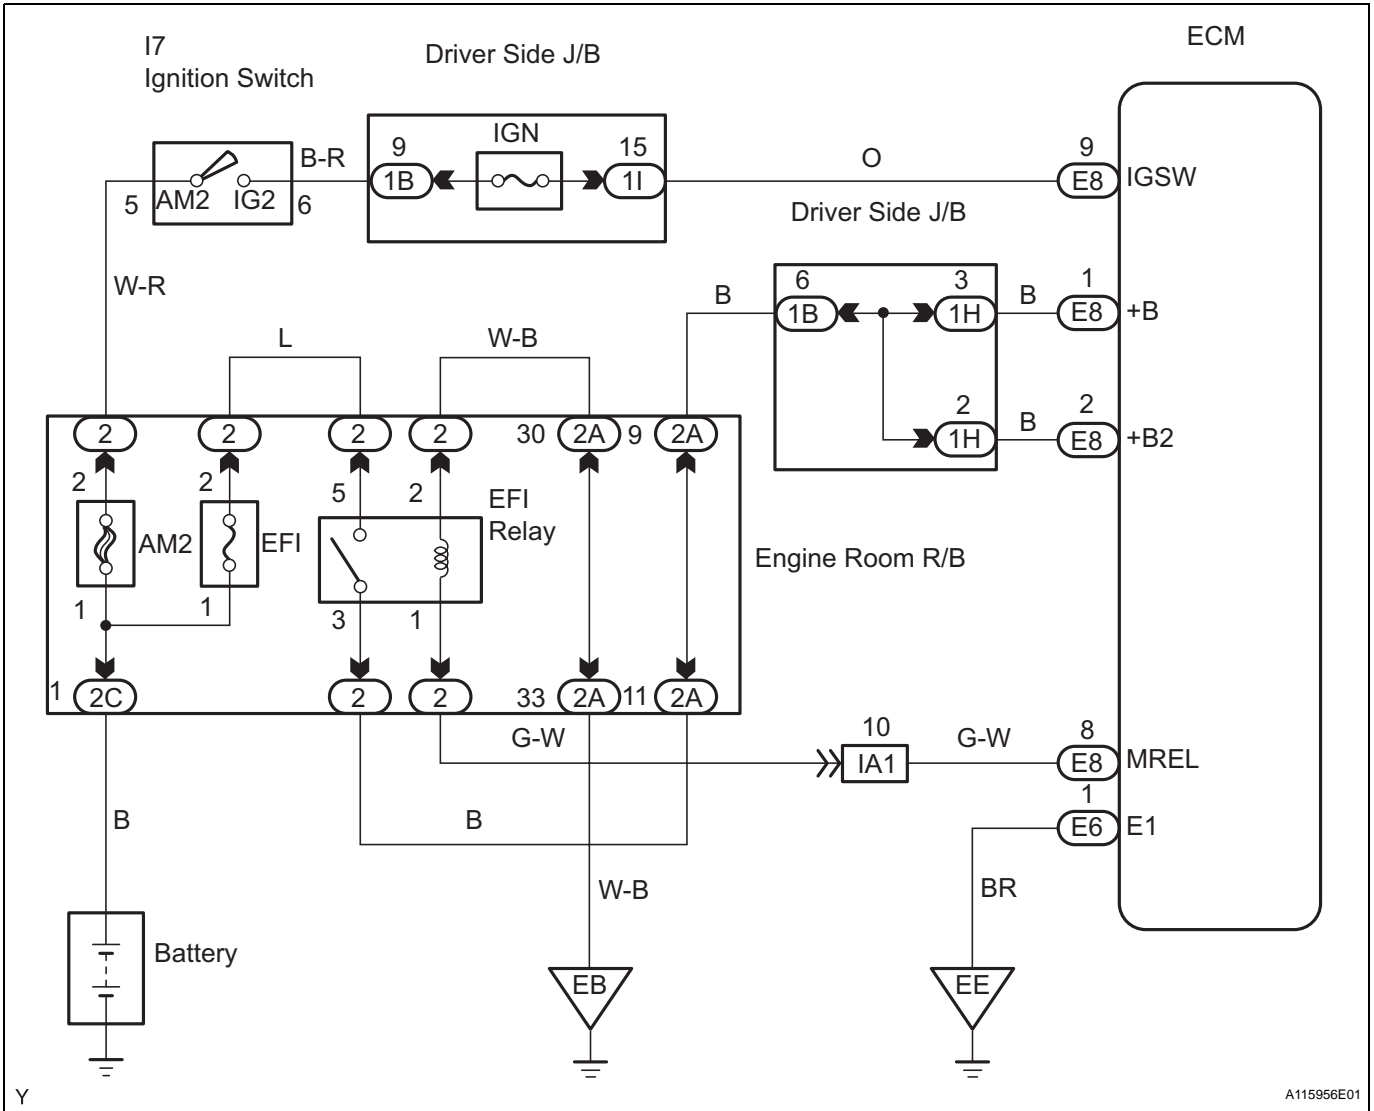

ES

1 INSPECT ECM (+B VOLTAGE)

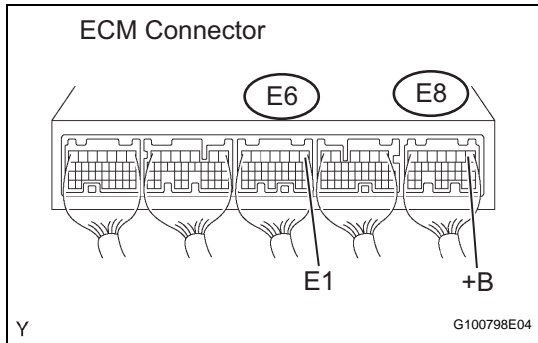

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between the terminals of the E8 and E6 ECM connectors.

Standard Voltage


Tester Connections	Specified Conditions
+B (E8-1) - E1 (E6-1)	9 to 14 V

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE

NG

2 CHECK HARNESS AND CONNECTOR (ECM - BODY GROUND)

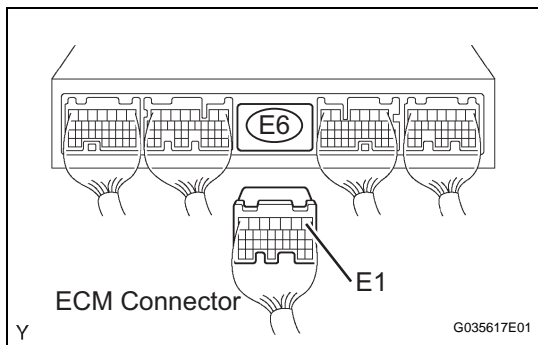

- (a) Disconnect the E6 ECM connector.
- (b) Check the resistance.

Standard Resistance (Check for open)

Tester Connections	Specified Conditions
E1 (E6-1) - Body ground	Below 1 Ω


- (c) Reconnect the ECM connector.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3 INSPECT ECM (IGSW VOLTAGE)

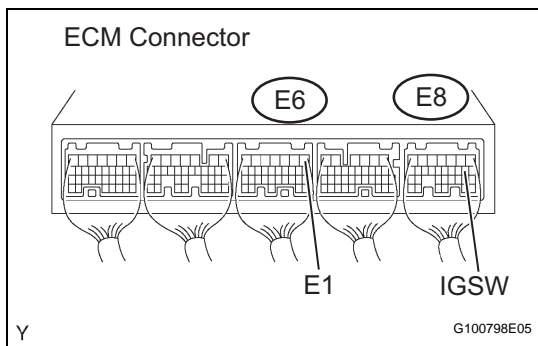

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between the terminals of the E8 and E6 ECM connectors.

Standard Voltage

Tester Connections	Specified Conditions
IGSW (E8-9) - E1 (E6-1)	9 to 14 V


OK

Go to step 6

NG

ES

4 CHECK FUSE (IGN FUSE)

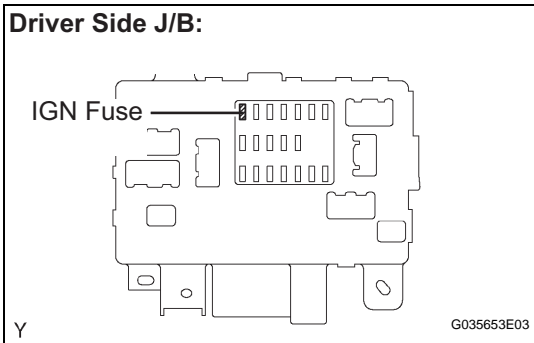


- (a) Remove the IGN fuse from the driver side J/B.
- (b) Check the IGN fuse resistance.
Standard Resistance:
Below 1 Ω
- (c) Reinstall the IGN fuse.

NG CHECK FOR SHORT IN ALL HARNESES AND COMPONENTS CONNECTED TO FUSE

OK

ES

5 INSPECT IGNITION OR STARTER SWITCH ASSEMBLY

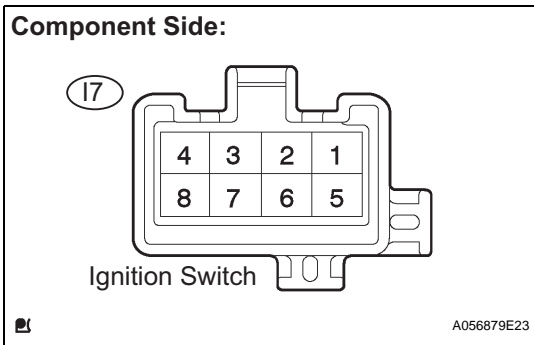

- (a) Disconnect the I7 ignition switch connector.
- (b) Check the resistance.
Standard Resistance

Ignition Switch Positions	Tester Connections	Specified Conditions
LOCK	All Terminals	10 kΩ or higher
ACC	2-4	Below 1 Ω
ON	1-2, 1-4, 5-6	
START	1-3, 1-4, 3-4, 5-6, 5-7, 6-7	


- (c) Reconnect the ignition switch connector.

NG REPLACE IGNITION OR STARTER SWITCH ASSEMBLY

OK

CHECK AND REPLACE HARNESS AND CONNECTOR (BATTERY - IGNITION SWITCH, IGNITION SWITCH - ECM)

6 INSPECT ECM (MREL VOLTAGE)

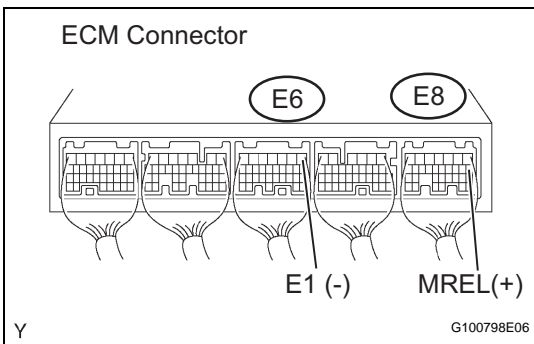


- (a) Turn the ignition switch ON.
- (b) Measure the voltage between the terminals of the E6 and E8 ECM connectors.
Standard Voltage

Tester Connections	Specified Conditions
MREL (E8-8) - E1 (E6-1)	9 to 14 V

NG REPLACE ECM

OK

7 CHECK FUSE (EFI FUSE)

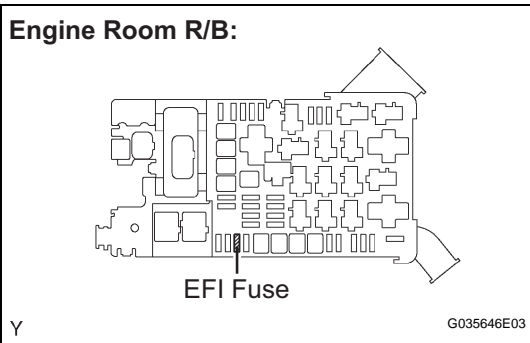


- (a) Remove the EFI fuse from the engine room R/B.
- (b) Check the EFI fuse resistance.
Standard Resistance:
Below 1 Ω
- (c) Reinstall the EFI fuse.

NG CHECK FOR SHORT IN ALL HARNESSSES AND COMPONENTS CONNECTED TO FUSE

ES

OK

8 INSPECT EFI RELAY

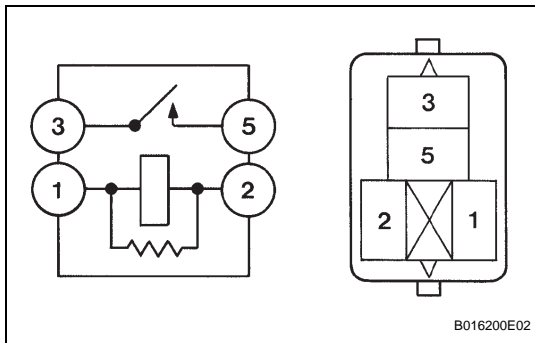

- (a) Remove the EFI relay from the engine room R/B.
- (b) Check the EFI relay resistance.
Standard Resistance


Tester Connections	Specified Conditions
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage applied to terminals 1 and 2)

- (c) Reinstall the EFI relay.

NG REPLACE EFI RELAY

OK

9 CHECK HARNESS AND CONNECTOR (EFI RELAY- ECM, EFI RELAY - BODY GROUND)

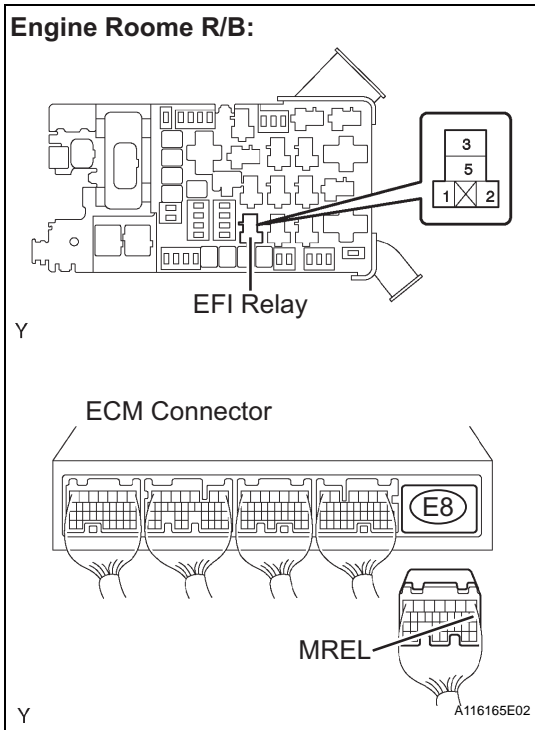

- (a) Check the harness and connector between the EFI relay and ECM.
- (1) Remove the EFI relay from the engine room R/B.
 - (2) Disconnect the E8 ECM connector.
 - (3) Check the resistance.

Standard Resistance (Check for open)

Tester Connections	Specified Conditions
EFI relay (1) - MREL (E8-8)	Below 1 Ω

Standard Resistance (Check for short)

Tester Connections	Specified Conditions
EFI relay (1) or MREL (E8-8) - Body ground	10 kΩ or higher

- (4) Reinstall the EFI relay.
 - (5) Reconnect the ECM connector.
- (b) Check the harness and connector between the EFI relay and body ground.
- (1) Remove the EFI relay from the engine room R/B.
 - (2) Check the resistance.

Standard Resistance (Check for open)

Tester Connections	Specified Conditions
EFI relay (2) - Body ground	Below 1 Ω

- (3) Reinstall the EFI relay.

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPAIR HARNESS AND CONNECTOR (TERMINAL +B OF ECM - BATTERY POSITIVE TERMINAL)

ES